



IEI Technology Corp.



MODEL:
ICEROCK-08A

**Industrial Tablet PC 1.6 GHz Intel® Atom™ Z530P CPU
On-board 1 GB DDR2 SDRAM, 802.11b/g/n Wireless, Mobile
3.75G, Gigabit Ethernet, USB, Mini USB, SD and CF card slots,
RoHS Compliant, IP62 Compliant Front Panel**

User Manual

Rev. 1.13 – 8 July, 2010



Revision

Date	Version	Changes
8 July, 2010	1.00	Initial release

Copyright

COPYRIGHT NOTICE

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Table of Contents

1 INTRODUCTION.....	1
1.1 OVERVIEW.....	2
1.2 FEATURES.....	3
1.3 FRONT PANEL.....	3
1.4 REAR PANEL.....	4
1.5 CONNECTORS	4
1.6 FRONT PANEL BUTTONS	5
1.7 REMOTE CONTROL.....	6
1.8 TECHNICAL SPECIFICATIONS	7
1.9 DIMENSIONS.....	10
2 UNPACKING	11
2.1 UNPACK THE PANEL PC.....	12
2.2 PACKING LIST.....	13
3 INSTALLATION	15
3.1 COMPACTFLASH® INSTALLATION	16
3.2 SIM CARD INSTALLATION	18
3.3 SD CARD INSTALLATION	19
3.4 MOUNTING THE SYSTEM	19
3.5 I/O CONNECTORS	20
3.5.1 Audio connectors (Mic-in and Headphones).....	20
3.5.2 LAN Connection Cable	21
3.5.3 Mini USB Device Connection	22
3.5.4 USB Device Connection.....	23
3.6 ICEROCK DOCKING STATION I/O CONNECTORS (OPTIONAL).....	25
3.6.1 Serial Device Cable	25
3.6.2 VGA Monitor Connection	27
3.7 POWER CONNECTION	28
3.8 DRIVER INSTALLATION.....	28
4 DEMO APPLICATION.....	29

ICEROCK-08A Panel PC

4.1 INTRODUCTION.....	30
4.1.1 Main Menu.....	30
4.1.2 User Interface	31
4.2 COMMUNICATION.....	31
4.2.1 Bluetooth.....	32
4.2.2 Wi-Fi Connection.....	32
4.2.3 LAN Connection.....	33
4.2.4 SIM Card/Mobile Network Connection	33
4.3 MULTIMEDIA	34
4.3.1 Webcam	35
4.4 SETTING	35
4.4.1 Audio/Brightness.....	36
4.4.2 Power Status	38
4.4.3 Module On/Off.....	38
4.4.4 Function Keys	39
5 BIOS SETUP	40
5.1 INTRODUCTION.....	41
5.1.1 Starting Setup.....	41
5.1.2 Using Setup	41
5.1.3 Getting Help.....	42
5.1.4 Unable to Reboot After Configuration Changes.....	42
5.1.5 BIOS Menu Bar.....	42
5.2 MAIN.....	43
5.3 ADVANCED.....	44
5.3.1 CPU Configuration.....	45
5.3.2 IDE Configuration	46
5.3.2.1 IDE Master, IDE Slave	47
5.3.3 Hardware Health Configuration.....	52
5.3.3.1 Embedded Controller Configuration.....	53
5.3.4 USB Configuration.....	54
5.3.4.1 USB Mass Storage Device Configuration.....	56
5.4 PCI/PNP.....	57
5.5 BOOT.....	60
5.5.1 Boot Settings Configuration.....	60

5.5.2 Boot Device Priority	62
5.5.3 Hard Disk Drives	63
5.5.4 Removable Drives	63
5.5.5 CD/DVD Drives	64
5.6 SECURITY	65
5.7 CHIPSET	66
5.7.1 Northbridge Configuration	67
5.7.2 Southbridge Configuration	69
5.8 EXIT	70
6 SYSTEM MAINTENANCE	72
6.1 SYSTEM MAINTENANCE INTRODUCTION	73
6.2 MOTHERBOARD REPLACEMENT	73
A SAFETY PRECAUTIONS	74
A.1 SAFETY PRECAUTIONS	75
A.1.1 General Safety Precautions	75
A.1.2 Anti-static Precautions	76
A.2 MAINTENANCE AND CLEANING PRECAUTIONS	76
A.2.1 Maintenance and Cleaning.....	76
A.2.2 Cleaning Tools.....	77
B ONE KEY RECOVERY	78
B.1 ONE KEY RECOVERY INTRODUCTION	79
B.1.1 System Requirement.....	79
B.1.2 Supported Operating System.....	79
B.2 SETUP PROCEDURE FOR WINDOWS	81
B.2.1 Hardware and BIOS Setup	82
B.2.2 Create Partitions	82
B.2.3 Install Operating System, Drivers and Applications.....	85
B.2.4 Build-up Recovery Partition.....	85
B.2.5 Create Factory Default Image.....	87
B.3 SETUP PROCEDURE FOR LINUX	92
B.4 RECOVERY TOOL FUNCTIONS	95
B.4.1 Factory Restore	97
B.4.2 Backup System.....	98

ICEROCK-08A Panel PC

<i>B.4.3 Restore Your Last Backup</i>	99
<i>B.4.4 Manual</i>	100
B.5 OTHER INFORMATION	101
<i>B.5.1 Using AHCI Mode or ALi M5283 / VIA VT6421A Controller</i>	101
<i>B.5.2 System Memory Requirement</i>	103
C BIOS OPTIONS	104
D TERMINOLOGY	107
E WATCHDOG TIMER	111
F HAZARDOUS MATERIALS DISCLOSURE	114
F.1 HAZARDOUS MATERIALS DISCLOSURE TABLE FOR IPB PRODUCTS CERTIFIED AS ROHS COMPLIANT UNDER 2002/95/EC WITHOUT MERCURY	115

List of Figures

Figure 1-1: ICEROCK-08A	2
Figure 1-2: Front Panel	3
Figure 1-3: Rear Panel.....	4
Figure 1-4: Connectors	5
Figure 1-5: Front Panel Buttons.....	5
Figure 1-6: Remote Control	6
Figure 1-7: Dimensions (units in mm)	10
Figure 3-1: Battery Removal.....	16
Figure 3-2: CompactFlash® Card Install	17
Figure 3-3: CompactFlash® Card Removal	17
Figure 3-4: SIM Card Install	18
Figure 3-5: SD Card Install.....	19
Figure 3-6: Left and Right Side I/O Connectors	20
Figure 3-7: Audio Connectors	21
Figure 3-8: LAN Connection	22
Figure 3-9: Mini USB Device Connection	23
Figure 3-10: USB Device Connection	24
Figure 3-11: ICEROCK Docking Station I/O Connectors	25
Figure 3-12: Serial Device Connector.....	26
Figure 3-13: Serial Port Pinouts	26
Figure 3-14: VGA Connector	27
Figure 4-1: Main Menu.....	30
Figure 4-2: User Interface	31
Figure 4-3: Communication Menu.....	31
Figure 4-4: Bluetooth Setting	32
Figure 4-5: Wi-Fi Setting	32
Figure 4-6: LAN Connection Setting.....	33
Figure 4-7: SIM Card/Mobile Network Connection Settings.....	34
Figure 4-8: Multimedia Menu	34
Figure 4-9: Webcam.....	35

ICEROCK-08A Panel PC

Figure 4-10: Setting Menu.....	36
Figure 4-11: Audio/Brightness Setting.....	37
Figure 4-12: Power Status	38
Figure 4-13: Module On/Off	39
Figure 4-14: Program Function Key.....	39
Figure B-1: Recovery Tool Setup Menu	83
Figure B-2: Command Mode.....	83
Figure B-3: Partition Creation Commands.....	84
Figure B-4: System Configuration for Windows	86
Figure B-5: Build-up Recovery Partition	86
Figure B-6: Press any key to continue	87
Figure B-7: Press F3 to Boot into Recovery Mode.....	87
Figure B-8: Recovery Tool Menu	88
Figure B-9: About Symantec Ghost Window.....	88
Figure B-10: Symantec Ghost Path	89
Figure B-11: Select a Local Source Drive	89
Figure B-12: Select a Source Partition from Basic Drive	89
Figure B-13: File Name to Copy Image to	90
Figure B-14: Compress Image.....	91
Figure B-15: Image Creation Confirmation	91
Figure B-16: Image Creation Complete	91
Figure B-17: Image Creation Complete	92
Figure B-18: Press Any Key to Continue	92
Figure B-19: Partitions for Linux.....	93
Figure B-20: System Configuration for Linux.....	94
Figure B-21: Access menu.lst in Linux (Text Mode).....	94
Figure B-22: Recovery Tool Menu	95
Figure B-23: Recovery Tool Main Menu	96
Figure B-24: Restore Factory Default.....	97
Figure B-25: Recovery Complete Window	97
Figure B-26: Backup System.....	98
Figure B-27: System Backup Complete Window	98
Figure B-28: Restore Backup	99
Figure B-29: Restore System Backup Complete Window	99
Figure B-30: Symantec Ghost Window	100

List of Tables

Table 1-1: Technical Specifications.....	9
Table 2-1: Packing List.....	13
Table 2-2: Packing List.....	14
Table 3-1: Serial Port Pinouts.....	26
Table 5-1: BIOS Navigation Keys.....	42

BIOS Menus

BIOS Menu 1: Main	43
BIOS Menu 2: Advanced	44
BIOS Menu 3: CPU Configuration	45
BIOS Menu 4: IDE Configuration	46
BIOS Menu 5: IDE Master and IDE Slave Configuration	47
BIOS Menu 6: Hardware Health Configuration	52
BIOS Menu 7: APM Configuration	53
BIOS Menu 8: USB Configuration	54
BIOS Menu 9: USB Mass Storage Device Configuration	56
BIOS Menu 10: PCI/PnP Configuration	58
BIOS Menu 11: Boot	60
BIOS Menu 12: Boot Settings Configuration	60
BIOS Menu 13: Boot Device Priority Settings	62
BIOS Menu 14: Hard Disk Drives	63
BIOS Menu 15: Removable Drives	63
BIOS Menu 16: CD/DVD Drives	64
BIOS Menu 17: Security	65
BIOS Menu 18: Chipset	66
BIOS Menu 19: Northbridge Chipset Configuration	67
BIOS Menu 20: Southbridge Chipset Configuration	69
BIOS Menu 21: Exit	70

Chapter

1

Introduction

1.1 Overview



Figure 1-1: ICEROCK-08A



NOTE:

IEI recommends Windows XP Embedded preinstalled on a CompactFlash® card. Cards with Windows XP Embedded are available from IEI. Contact sales@iei.com.tw or go to <http://www.ieworld.com> for more information.

The ICEROCK-08A is an industrial tablet PC with an 8 inch touchscreen and an IP62 compliant front panel. The ICEROCK-08A features a 1.6 GHz Intel® Atom™ Z530P or 1.1 GHz Intel® Atom™ Z510P with 1 GB DDR2 SDRAM on-board.

Storage needs are met by installing a CompactFlash® card and Secure Digital (SD) card. A CompactFlash® card with Windows XPE is also available.

Wireless networking is enabled through an 802.11b/g/n wireless adapter. A Bluetooth 2.1+EDR module provides a connection to Bluetooth devices. An optional mobile 3.75G module provides a connection to mobile phone networks. Wired options are always available through RJ-45 connector on the side panel, with two USB ports and one Mini USB port for peripherals.

A 1.3 megapixel webcam and microphone provide video conferencing capabilities. Audio connections include one line-out for connecting to headphones and an input for an external microphone. Two 1 watt speakers are built-in.

ICEROCK-08A Panel PC

1.2 Features

Some of the standard features of the ICEROCK-08A tablet PC include:

- Wireless LAN
- Gigabit Ethernet
- Bluetooth v2.1+EDR
- G-Sensor to automatically change display mode from portrait to landscape
- Ambient light sensor
- One Key Recovery
- IP62 compliant front panel protection
- RoHS compliant

1.3 Front Panel

The ICEROCK-08A is made with black plastic chassis.



Figure 1-2: Front Panel

1.4 Rear Panel

The rear panel consists of the built-in stand and battery. The CF and SIM card slots can be accessed by removing the battery.

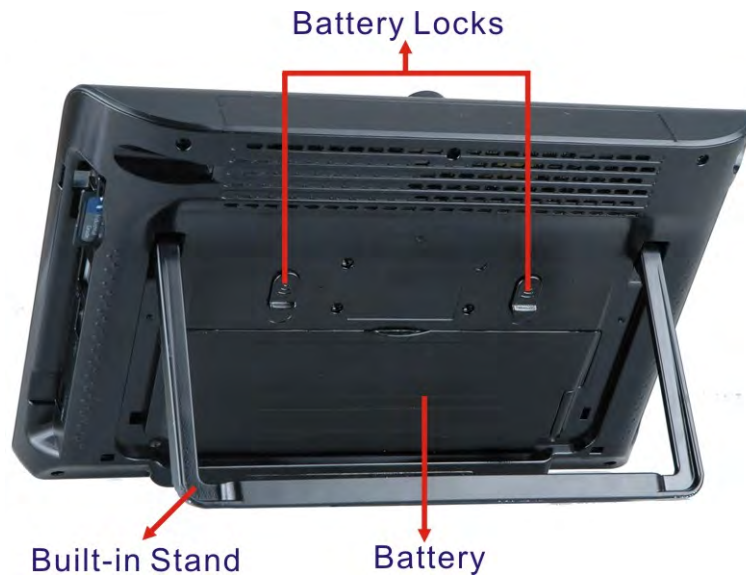


Figure 1-3: Rear Panel

1.5 Connectors

The side panels have the following slots, buttons and switches (Figure 1-4):

- 1 x RJ-45 port for Gigabit LAN
- 1 x 12 V DC power input
- 1 x Mini USB port
- 2 x USB ports
- 1 x Mic-in jack
- 1 x Headphones jack
- 1 x Power button
- 1 x Bluetooth/Wi-Fi On/Off switch
- 1 x Touch pen
- 1 x SD card slot with lock

ICEROCK-08A Panel PC



Figure 1-4: Connectors

1.6 Front Panel Buttons



Figure 1-5: Front Panel Buttons

There are several buttons on the front panel of the ICEROCK-08A as show in the figure above. Following are descriptions of their functions:

- **Programmable Function Keys (F1~F8)**

Function Keys F1~F8 can be programmed to simplify frequently used applications with the pressing of a single shortcut key.

- **Hotkey** 

Press the hotkey and a function key together at the same time to perform the following functions:

- Hotkey + F1 = Sleep
- Hotkey + F2 = Mute on/off
- Hotkey + F3 = Volume up
- Hotkey + F4 = Volume down

- Hotkey + F5 = Auto dimmer on/off. When the ambient light sensor is on, the screen brightness will adjust to match ambient light conditions. It is recommended that this sensor be disabled during nighttime use.
- Hotkey + F6 = Brightness up
- Hotkey + F7 = Brightness down
- Hotkey + F8 = LCD on/off
- **Navigation Keypad**
 - Up, Down
 - Right, Left
 - Center (select or enter)



1.7 Remote Control

The figure below illustrates the buttons on the ICEROCK-08A remote control.

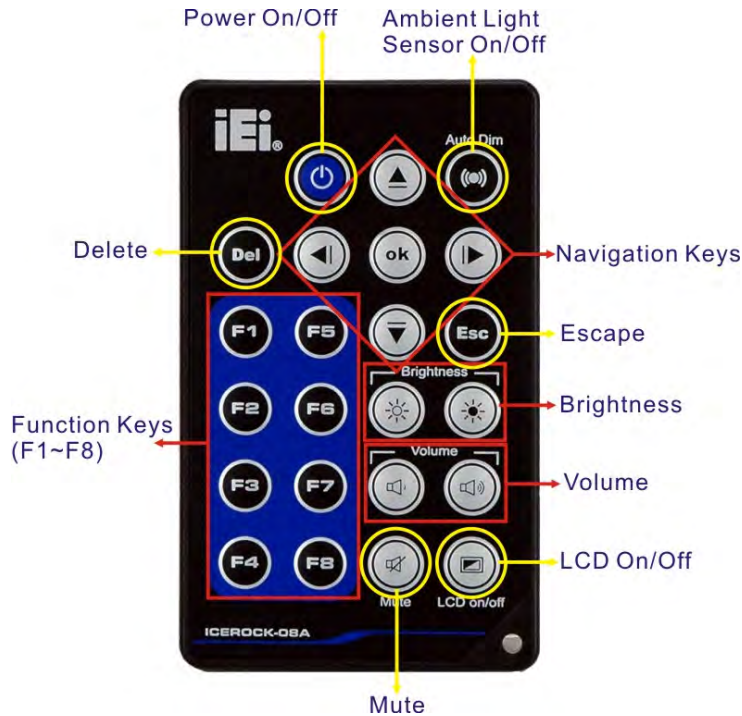


Figure 1-6: Remote Control

The ICEROCK-08A comes with a remote control. Below is a list of the buttons on the remote control and their function:

1. Power – turn the system on or off

ICEROCK-08A Panel PC

2. Auto Dim – turn the ambient light sensor on or off
3. Del - delete
4. Navigation – up/down, right/left, OK
5. Function Keys – programmable keys F1~F8
6. Esc – escape
7. Brightness – increase or decrease the LCD screen brightness
8. Volume – increase or decrease the volume
9. Mute – use this to mute the sound
10. LCD On/Off – turn the LCD on or off

1.8 Technical Specifications

The technical specifications for the ICEROCK-08A systems are listed in the table below.

System	ICEROCK-08A-Z530	ICEROCK-08A-Z510
CPU	1.6 GHz Intel® Atom™ Z530P	1.1 GHz Intel® Atom™ Z510P
Chipset	Intel® SCH US15WP	
Memory	1.0 GB 533 MHz DDR2 SDRAM on-board	
OS	Windows XP Embedded with optional CompactFlash® card	
Storage	1 x CompactFlash® card slot 1 x SD card slot	
Audio	2 x Speaker (1 W each) 1 x Microphone	
Camera	1 x 1.3 megapixel webcam	
Display		
LCD	8.0" LCD with resistive touchscreen and auto-dimming	
Max. Resolution	800 x 600	
Brightness (cd/m ²)	250	
Contrast Ratio	500:1	
LCD Colors	262,000	
Pixel Pitch	0.2025 x 0.2025	
Viewing Angle (H/V)	140/130	
Backlight MTBF	50000	
Communication		
LAN	1 x 10/100/1000 Mbps RJ-45	

System	ICEROCK-08A-Z530	ICEROCK-08A-Z510
Wireless LAN	802.11b/g	
Bluetooth	Bluetooth 2.1 + EDR Class 1	
WWAN (models with optional HSDPA module only)	HSPA/UMTS-800/850/900/1900/2100 MHz Quad-band EDGE/GPRS/GSM-850/900/1800/1900 MHz Dual-band EV-DO/CDMA-800/1900 MHz	
Power		
Power Input	12 V DC input	
Power Consumption		
Power Adapter	P/N: 63000-FSP036RAB608-RS 36 W Power Adapter Input: 90 V AC ~ 264 V AC, 50/60Hz Output: 12 V DC	
Battery	4 hours of normal use (25% On state, 25% Standby, and 50% Off) 2 hours of continuous use 2400 mAh Lithium Ion Battery	
Physical Character		
Construction Material	ABS + PC plastic front frame	
Mounting	Mobile / optional Docking Station (VESA 75 mm x 75 mm)	
Dimensions (W x H x D) (mm)	253.5 x 179.79 x 36.59	
Operation Temperature	0°C ~ 40°C	
Storage Temperature	-20°C ~ 60°C	
Humidity	5% ~ 95% non-condensing	
Net weight	1.044 kg with Battery pack (150 g)	
IP level (front panel)	IP62	
Safety	CE, FCC, CB, CCC	
Connectors and Buttons		

ICEROCK-08A Panel PC

System	ICEROCK-08A-Z530	ICEROCK-08A-Z510
I/O Ports and Switches	1 x 12 V DC input connector 2 x USB 2.0 1 x Gigabit Ethernet RJ-45 port 1 x Microphone line-in jack 1 x Audio line-out jack 1 x Mini USB 1 x Wi-Fi/Bluetooth On/Off switch 1 x Power button	
Front Panel Buttons and LED Indicators	1 x Five-way navigation button 8 x Programmable buttons 1 x Hotkey 1 x Power LED 1 x Wi-Fi/Bluetooth LED 1 x HDD (CF Card) LED 1 x 3.75G LED 1 x IR Remote and Ambient Light Sensor	

Table 1-1: Technical Specifications

1.9 Dimensions

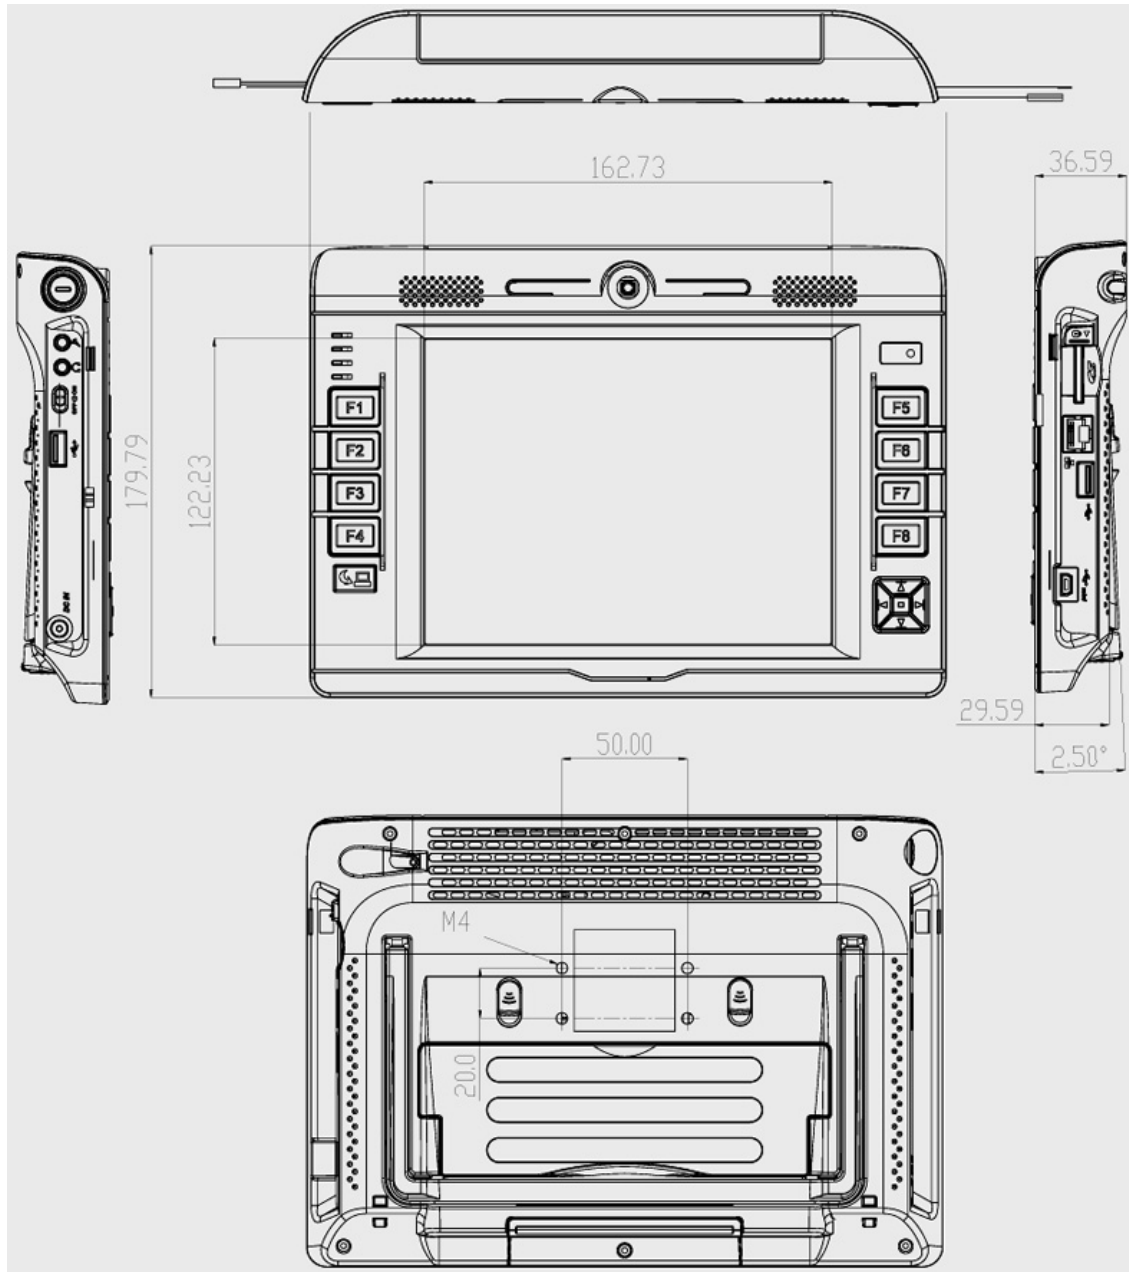


Figure 1-7: Dimensions (units in mm)

Chapter

2

Unpacking

**WARNING:**

When installing the ICEROCK-08A, make sure to:

- **Turn the power off:** Chance of electrocution. Turn off the monitor and unplug it from the power supply.
- **Only let certified engineers change the hardware settings:** Incorrect settings can cause irreparable damage to the product.
- **Take anti-static precautions:** Electrostatic discharge can destroy electrical components and injure the user. Users must ground themselves using an anti-static wristband or similar device.

The installation steps below should be followed in order.

Step 1: Unpack the tablet PC

Step 2: Check all the required parts are included

Step 3: Install the CompactFlash® card (if not included)

Step 4: Mount the tablet PC

Step 5: Connect peripheral devices to the side panels of the tablet PC

Step 6: Connect the power cable

Step 7: Configure the system

2.1 Unpack the tablet PC

To unpack the tablet PC, follow the steps below:

**WARNING!**

Only remove the protective plastic cover stuck to the front screen after installation. The plastic layer protects the monitor surface during installation process.

ICEROCK-08A Panel PC

Step 1: Carefully cut the tape sealing the box. Only cut deep enough to break the tape.

Step 2: Open the outside box.

Step 3: Carefully cut the tape sealing the box. Only cut deep enough to break the tape.

Step 4: Open the inside box.

Step 5: Lift the table PC out of the boxes.

Step 6: Remove the peripheral parts box from the main box.

2.2 Packing List

The ICEROCK-08A tablet PC is shipped with the following components:

Quantity	Item	Image
1	ICEROCK-08A	
1	Power adapter (P/N: 63000-FSP036RAB608-RS)	
1	Power cable (P/N: 32000-000002-RS)	
1	Battery pack (P/N: ICEROCKBP-08A-R10)	
1	Remote control unit	
1	Touchscreen pen	
1	Utility CD (P/N: 7B000-000087-RS)	

Table 2-1: Packing List

These optional items are also available.

Quantity	Item	Image
1	OS – Windows XP Embedded (CF card) (P/N: ICEROCKCF-08-XPE-R10)	
1	Battery pack (P/N: ICEROCKBP-08A-R10)	
1	Docking station (P/N: ICEROCKDS-08A-R10)	
1	Car power module (P/N: IDD-930160-KIT)	
1	Protection jacket (P/N: ICEROCKPJ--00-R10)	
1	Carrying bag (P/N: ICEROCKCB--00-R10)	
1	Touchscreen Pen	

Table 2-2: Packing List

Chapter

3

Installation

3.1 CompactFlash® Installation

This section covers the installation of the CompactFlash® card.

Step 1: Remove the battery. Unlock battery by sliding locks away from the battery. Lift the battery and remove.

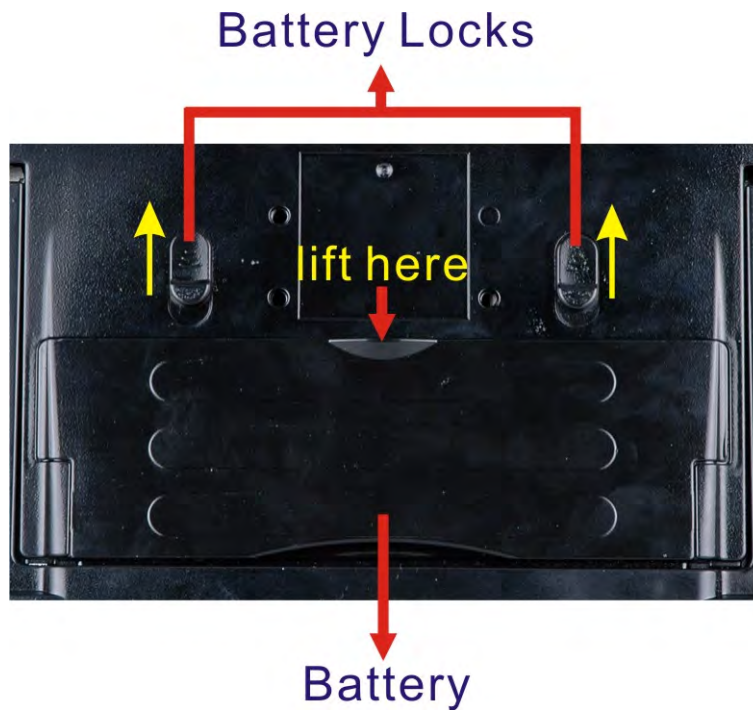


Figure 3-1: Battery Removal

Step 2: Install the CompactFlash® card in the slot indicated below. Fully insert the CF card when installing.

ICEROCK-08A Panel PC



insert CF card

Figure 3-2: CompactFlash® Card Install

Step 3: To remove the CF card push the tab on the right.



press tab to remove CF card

Figure 3-3: CompactFlash® Card Removal


Step 4: Replace and securely lock the battery.

3.2 SIM Card Installation

This section covers the installation of a SIM card for mobile network connections on the ICEROCK-08A models with optional mobile 3.75G module.

Step 1: Remove the battery as shown above in **Section 3.1**, Step 1.

Step 2: Install the SIM card in the slot indicated below.

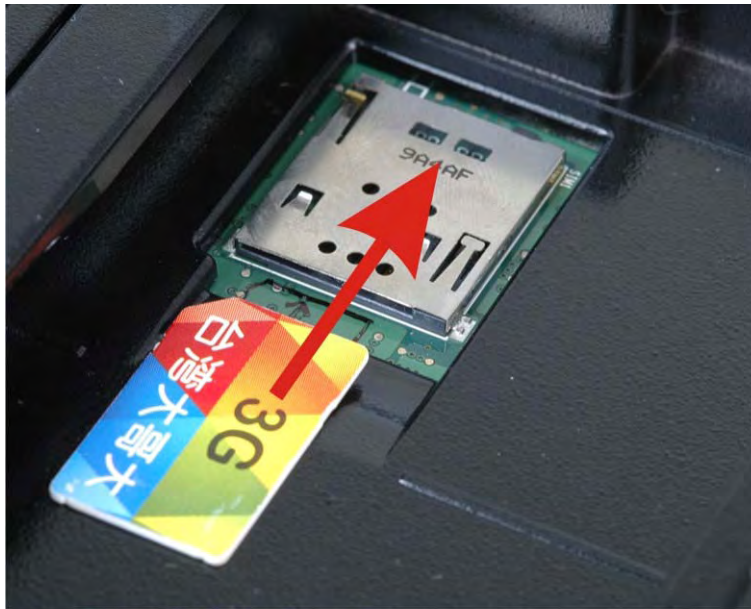

insert SIM card

Figure 3-4: SIM Card Install

Step 3: Replace and securely lock the battery.

ICEROCK-08A Panel PC

3.3 SD Card Installation

This section covers the installation of a SD card.

Step 1: Locate the SD card slot on the right side of the ICEROCK-08A.

Step 2: Install the SD card in the slot indicated below.

lock SD card



insert SD card

Figure 3-5: SD Card Install

Step 3: Slide the lock to secure the SD card.

3.4 Mounting the System

The following installation options are available:

- Docking Station
- Wall mounting with optional Docking Station

The installation instructions are included with the Docking station or stand.

3.5 I/O Connectors

The I/O connectors on either side of the ICEROCK-08A extend the capabilities of the panel PC but are not essential for operation (except power). **Figure 3-6**



Figure 3-6: Left and Right Side I/O Connectors

3.5.1 Audio connectors (Mic-in and Headphones)

The audio jacks on the external audio connector enable the ICEROCK-08A to be connected to a stereo sound setup. To install the audio devices, follow the steps below.

- Step 1: Identify the audio plugs.** The plugs on your home theater system or speakers may not match the colors on the rear panel. If audio plugs are plugged into the wrong jacks, sound quality will be very bad.
- Step 2: Plug the audio plugs into the audio jacks.** Plug the audio plugs into the audio jacks. If the plugs on your speakers are different, an adapter will need to be used to plug them into the audio jacks.

- **Line Out port (Lime):** Connects to a headphone or a speaker.
- **Microphone (Pink):** Connects to a microphone.

ICEROCK-08A Panel PC

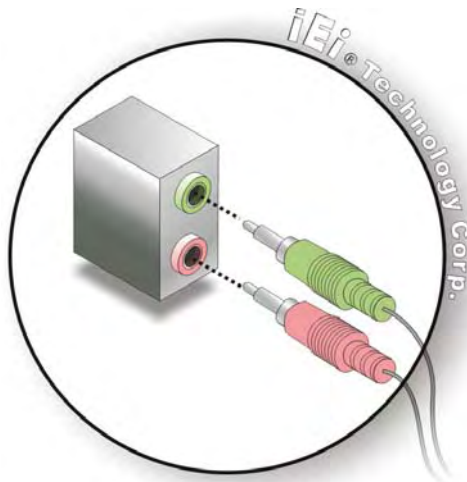


Figure 3-7: Audio Connectors

Step 3: Check audio clarity. Check that the sound is coming through the right speakers by adjusting the balance front to rear and left to right.

3.5.2 LAN Connection Cable

The RJ-45 connectors enable connection to an external network. To connect a LAN cable with an RJ-45 connector, please follow the instructions below.

Step 1: Locate the RJ-45 connector on the bottom panel.

Step 2: Align the connectors. Align the RJ-45 connector on the LAN cable with one of the RJ-45 connectors on the bottom panel. See Figure 3-8.

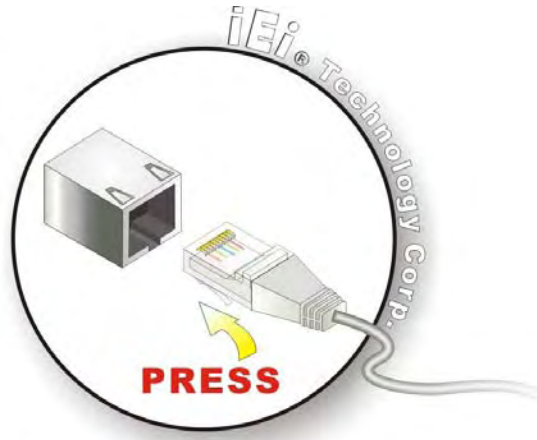


Figure 3-8: LAN Connection

Step 3: Insert the LAN cable RJ-45 connector. Once aligned, gently insert the LAN cable RJ-45 connector into the onboard RJ-45 port.

3.5.3 Mini USB Device Connection

There is one Mini USB 2.0 connectors. The Mini USB connector is on the right side of the ICEROCK-08A. To connect a USB 2.0 or USB 1.1 device, please follow the instructions below.

Step 1: Located the Mini USB connector. The location of the Mini USB connector is shown in Figure 3-6.

Step 2: Align the connectors. Align the Mini USB device connector with the connector on the ICEROCK-08A. See figure below.

ICEROCK-08A Panel PC



Figure 3-9: Mini USB Device Connection

Step 3: **Insert the device connector.** Once aligned, gently insert the Mini USB device connector into the on-board connector.

3.5.4 USB Device Connection

There are two USB 2.0 connectors. One connector is located on each side of the ICEROCK-08A, left and right. To connect a USB 2.0 or USB 1.1 device, please follow the instructions below.

Step 1: **Located the USB connectors.** The locations of the USB connectors are shown in **Figure 3-6**.

Step 2: **Align the connectors.** Align the USB device connector with one of the connectors on the ICEROCK-08A. See figure below.

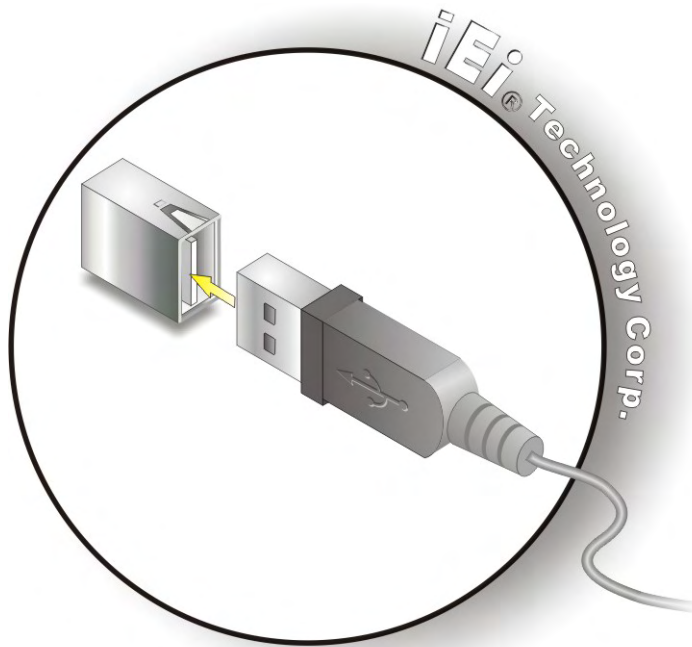


Figure 3-10: USB Device Connection

Step 3: **Insert the device connector.** Once aligned, gently insert the USB device connector into the on-board connector.

ICEROCK-08A Panel PC

3.6 ICEROCK Docking Station I/O Connectors (optional)

The I/O connectors on the rear panel of the ICEROCK-08A Docking Station extend the capabilities of the panel PC but are not essential for operation (except power).



Figure 3-11: ICEROCK Docking Station I/O Connectors

3.6.1 Serial Device Cable

The serial device connector is for connecting a RS-232 serial device. Follow the steps below to connect a serial device to the panel PC.

Step 1: Locate the DB-9 connector. The location of the DB-9 connector is shown in Figure 3-11.

Step 2: Insert the serial connector. Insert the DB-9 connector of a serial device into the DB-9 connector on the bottom panel. See Figure 3-12.

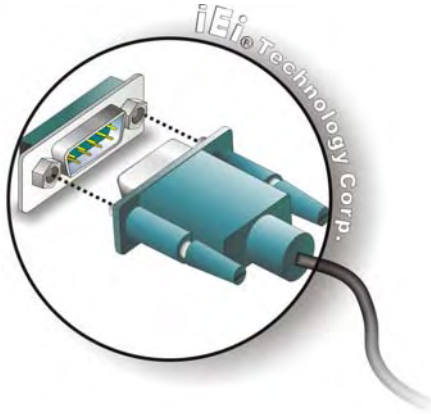


Figure 3-12: Serial Device Connector

Step 3: Secure the connector. Secure the serial device connector to the external interface by tightening the two retention screws on either side of the connector.

3.6.1.1.1 RS-232 Serial Port Pinouts

Following are the RS-232 serial port pinouts.

Pin	Description	Pin	Description
1	DCD	6	DSR
2	RX	7	RTS
3	TX	8	CTS
4	DTR	9	RI
5	GND		

Table 3-1: Serial Port Pinouts

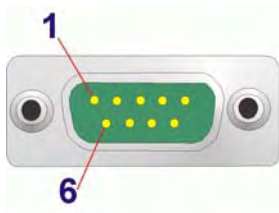


Figure 3-13: Serial Port Pinouts

ICEROCK-08A Panel PC

3.6.2 VGA Monitor Connection

The ICEROCK-08A Docking Station has a single female DB-15 connector on the bottom peripheral interface panel. The DB-15 connector is connected to a CRT or VGA monitor. To connect a second monitor to the ICEROCK-08A, please follow the instructions below.

- Step 1: Locate the female DB-15 connector.** The location of the female DB-15 connector is shown in **Figure 3-11**.
- Step 2: Align the VGA connector.** Align the male DB-15 connector on the VGA screen cable with the female DB-15 connector on the external peripheral interface.
- Step 3: Insert the VGA connector** Once the connectors are properly aligned with the insert the male connector from the VGA screen into the female connector on the ICEROCK-08A. See Figure 3-14.

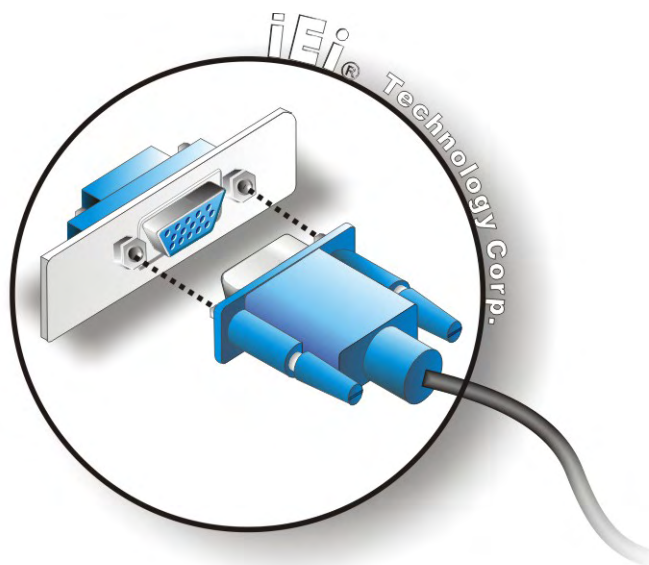


Figure 3-14: VGA Connector

- Step 4: Secure the connector.** Secure the DB-15 VGA connector from the VGA monitor to the external interface by tightening the two retention screws on either side of the connector.

3.7 Power Connection

The power cable connects the power adapter to the power outlet. The power adapter and power cable are required for operation of the ICEROCK-08A.

Step 1: Connect the power adapter to the panel PC.

Step 2: Connect the power cable to the included power adapter.

Step 3: Connect the power cable to the power outlet.

3.8 Driver Installation



NOTE:

The contents of the CD may vary throughout the life cycle of the product and is subject to change without prior notice. Visit the IEI website or contact technical support for the latest updates.

The following drivers can be installed on the system; each driver is in its own directory on the driver CD:

- Chipset driver
- Graphics driver
- LAN driver
- Audio driver
- Touch panel driver
- Keypad utility driver
- Wireless LAN card driver

Chapter

4

Demo Application

4.1 Introduction

The demo software application of the ICEROCK-08A includes three main categories: Communication, Multimedia, and Setting. Each category has several functions which are listed below:

- Communication
 - Bluetooth
 - Wi-Fi
 - LAN Connection
 - SIM Card/Mobile Network
- Multimedia
 - Webcam
- Setting
 - Audio/Brightness Setting
 - Power Status
 - Module On/Off
 - Function Keys

4.1.1 Main Menu

Figure 4-1 shows the main menu of the application. Slide left or right to navigate the menu. Click the image to go into the menu page.



Figure 4-1: Main Menu

ICEROCK-08A Panel PC

4.1.2 User Interface

Figure 4-2 shows the user interface of the menu page. Each menu page displays buttons to navigate to the function setting page.

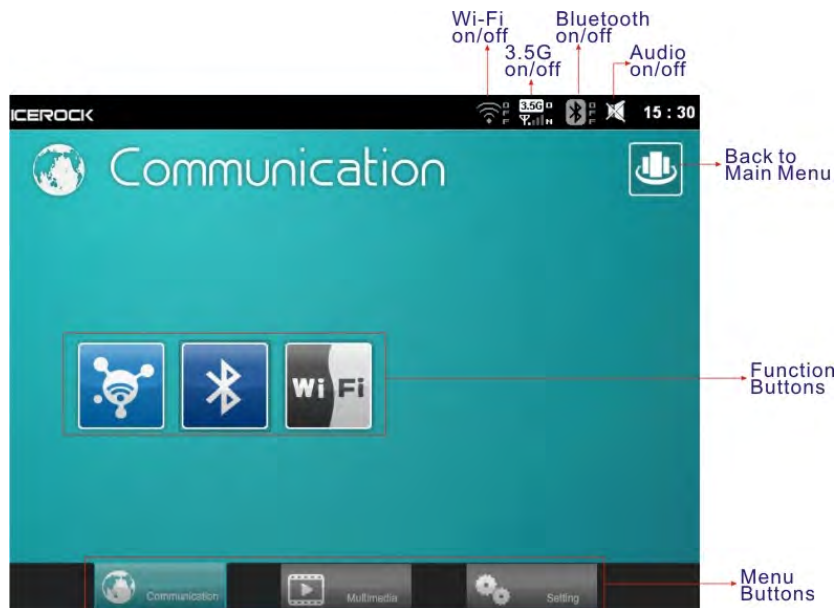


Figure 4-2: User Interface

4.2 Communication

Use the communication menu to setup Bluetooth, Wi-Fi and 3G connections.



Figure 4-3: Communication Menu

4.2.1 Bluetooth

Use the Bluetooth page to find available Bluetooth devices and enable or disable a connection.



Figure 4-4: Bluetooth Setting

4.2.2 Wi-Fi Connection

Use the Wi-Fi connection menu to find available Wi-Fi networks and connect to or disconnect from a network.

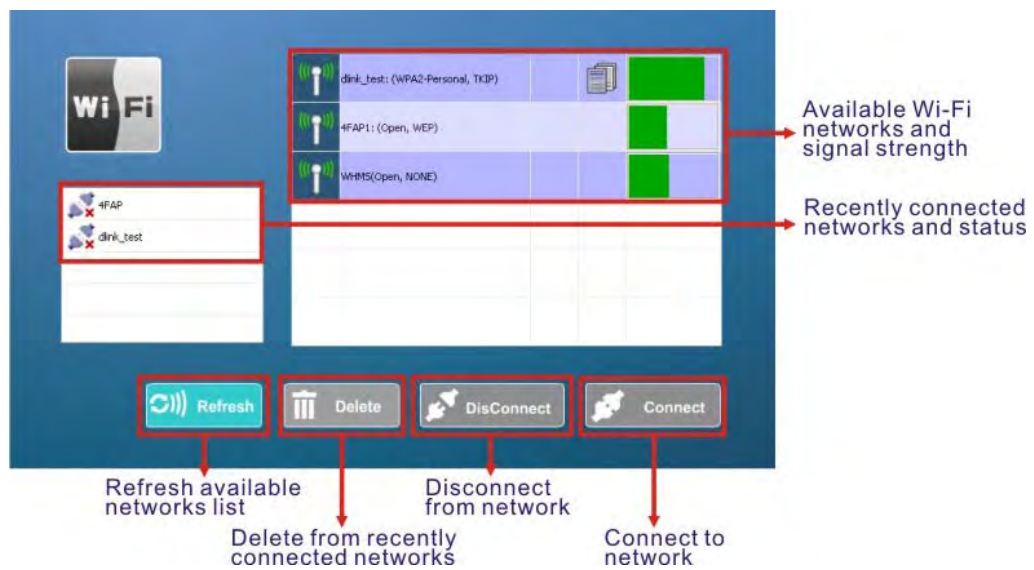


Figure 4-5: Wi-Fi Setting

ICEROCK-08A Panel PC

4.2.3 LAN Connection

Use the LAN connection menu to connect to the Local Area Network via the RJ-45 Ethernet LAN connector. Check the auto connect box to automatically connect to the network using connection details automatically provided by the network. If necessary input the required values for your network.


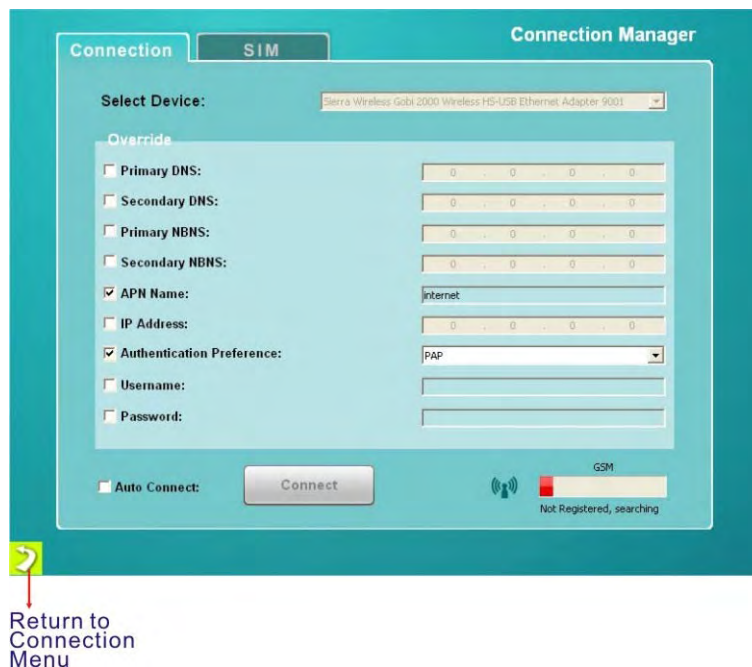


Figure 4-6: LAN Connection Setting

4.2.4 SIM Card/Mobile Network Connection

Use the SIM Card connection menu to verify the PIN1 and PIN2 values for your 3.5G mobile network and enable or disable PIN protection. The status, verify retries left, and unblock retries left for PIN1 and PIN2 are displayed on this menu.

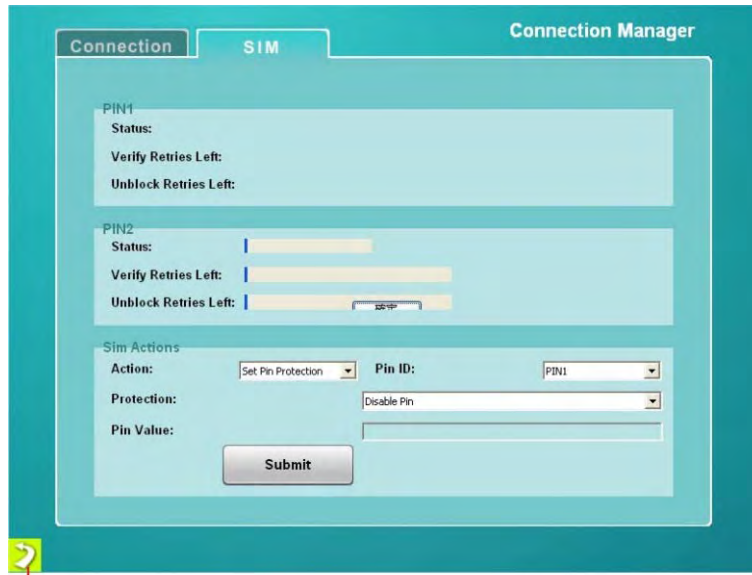

Return to Connection Menu

Figure 4-7: SIM Card/Mobile Network Connection Settings

4.3 Multimedia

Use the multimedia menu to control the webcam.



Figure 4-8: Multimedia Menu

ICEROCK-08A Panel PC

4.3.1 Webcam

Use the webcam page to capture video through the built-in webcam or play previously captured video. Also use this menu to start or stop the webcam preview.

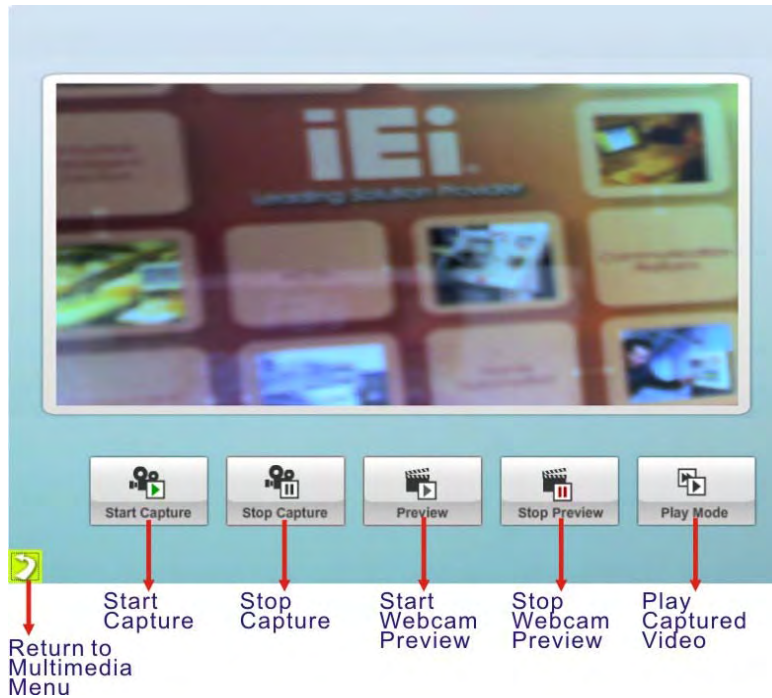


Figure 4-9: Webcam

4.4 Setting

Use the Setting page to adjust the setting of audio volume, LCD brightness, embedded modules, function keys and check the power/battery status.



Figure 4-10: Setting Menu

4.4.1 Audio/Brightness

Use the Audio/Brightness page to adjust the LCD brightness and audio volume and enable or disable Auto Dimming, LCD backlight, and Audio. Turning off Auto Dimming will disable the Ambient Light Sensor. The LCD backlight is disabled when set to off. The audio is muted when the Volume setting is turned off.

ICEROCK-08A Panel PC

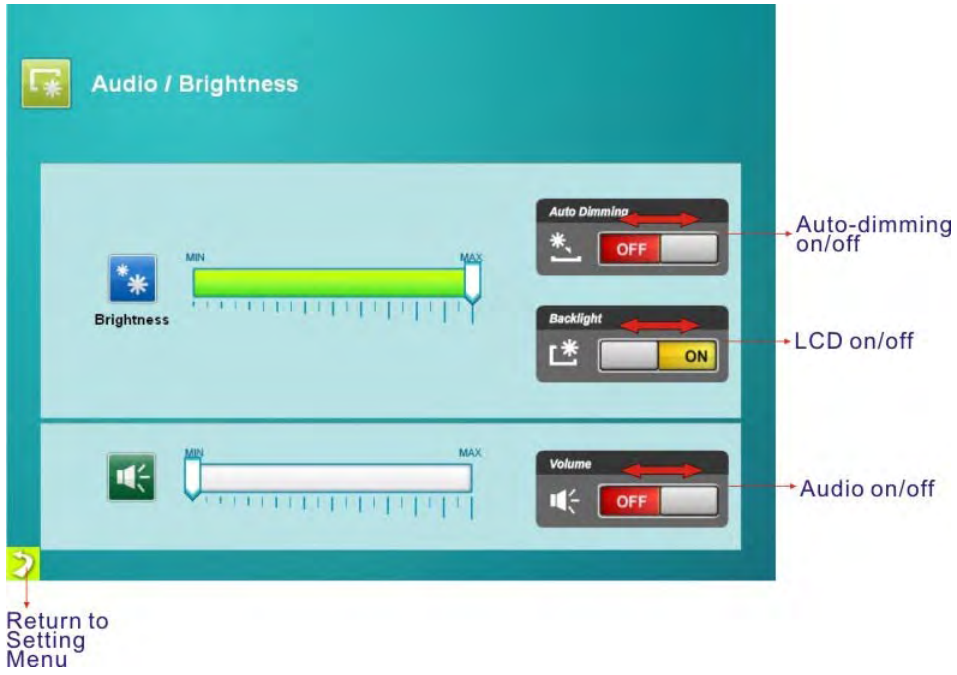


Figure 4-11: Audio/Brightness Setting

4.4.2 Power Status

Use this menu to check the power status of the ICEROCK and its battery.

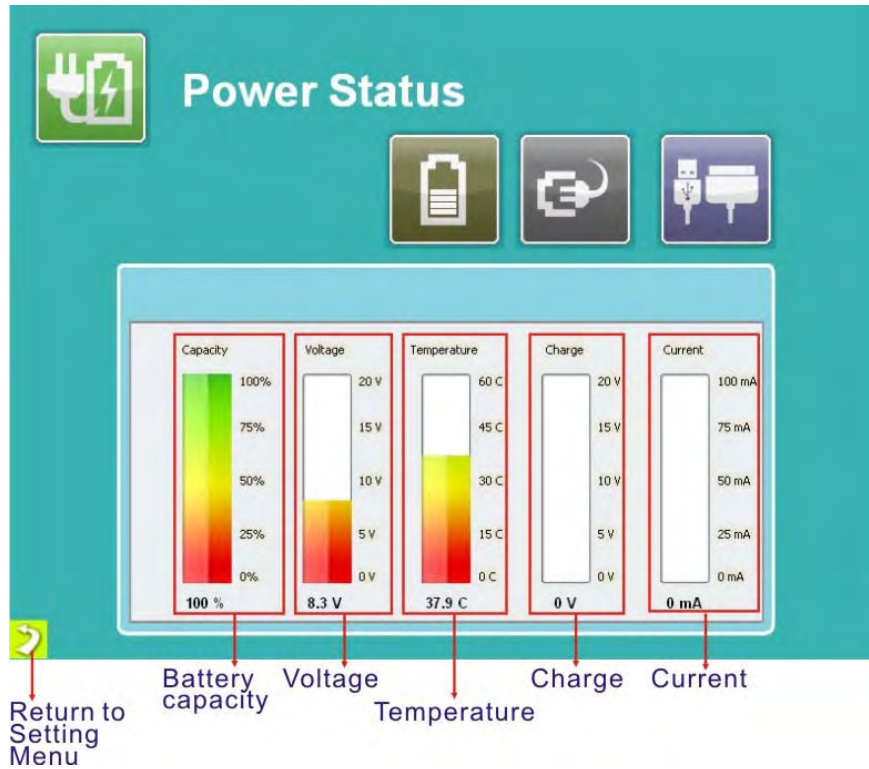


Figure 4-12: Power Status

4.4.3 Module On/Off

Use the Module On/Off page to enable or disable the embedded modules including Bluetooth, Wi-Fi, and 3.5G mobile connections. Slide the bars next to the module icons to the left to turn on and to the right to turn off.

ICEROCK-08A Panel PC

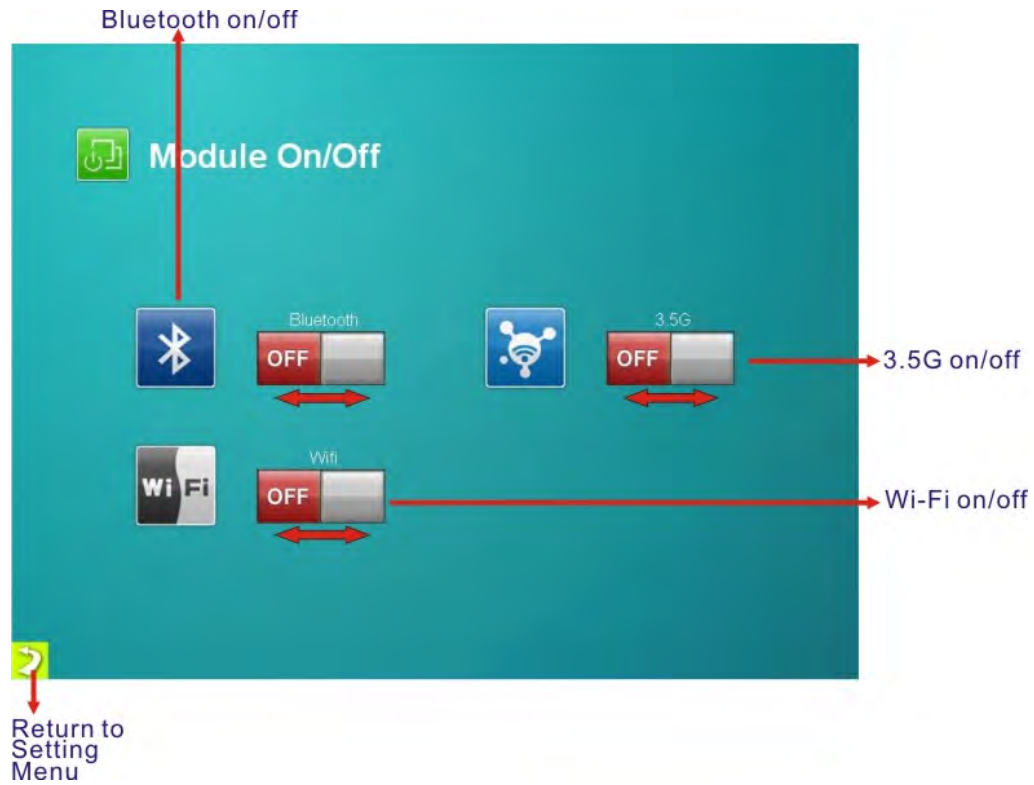


Figure 4-13: Module On/Off

4.4.4 Function Keys

Use the Function Key page to program the function on the right edge of the front panel of the ICEROCK-08A. To program a key, click the button on the screen. Select a function from the pop-up menu, then click Apply button.

This section is missing from the software installed on my sample. Please provide a screen capture.

Figure 4-14: Program Function Key

Chapter

5

BIOS Setup

5.1 Introduction

The BIOS is programmed onto the BIOS chip. The BIOS setup program allows changes to certain system settings. This chapter outlines the options that can be changed.

5.1.1 Starting Setup

The AMI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

11. Press the **DELETE** key as soon as the system is turned on or
12. Press the **DELETE** key when the “**Press Del to enter SETUP**” message appears on the screen.

If the message disappears before the **DELETE** key is pressed, restart the computer and try again.

5.1.2 Using Setup

Use the arrow keys to highlight items, press **ENTER** to select, use the PageUp and PageDown keys to change entries, press **F1** for help and press **Esc** to quit. Navigation keys are shown in.

Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
Esc key	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
Page Up key	Increase the numeric value or make changes
Page Dn key	Decrease the numeric value or make changes
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu

Key	Function
F2 /F3 key	Change color from total 16 colors. F2 to select color forward.
F10 key	Save all the CMOS changes, only for Main Menu

Table 5-1: BIOS Navigation Keys

5.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window press **Esc** or the **F1** key again.

5.1.4 Unable to Reboot After Configuration Changes

If the computer cannot boot after changes to the system configuration is made, CMOS defaults. Use the jumper described in Chapter 5.

5.1.5 BIOS Menu Bar

The **menu bar** on top of the BIOS screen has the following main items:

- Main – Changes the basic system configuration.
- Advanced – Changes the advanced system settings.
- PCIPnP – Changes the advanced PCI/PnP Settings
- Boot – Changes the system boot configuration.
- Security – Sets User and Supervisor Passwords.
- Chipset – Changes the chipset settings.
- Exit – Selects exit options and loads default settings

The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.

ICEROCK-08A Panel PC

5.2 Main

The **Main** BIOS menu (BIOS Menu 1) appears when the **BIOS Setup** program is entered. The **Main** menu gives an overview of the basic system information.

```

BIOS SETUP UTILITY
Main  Advanced  PCIPNP  Boot  Security  Chipset  Exit

System Overview
-----
AMIBIOS
Version      :08.00.15
Build Date   :06/02/10
ID:          :Z109MR10

Processor
Intel® Atom™ CPU Z530 @ 1.60 GHz
Speed        :1600 MHz
Count        :1

System Memory
Size         :1019MB

System Time      [14:20:27]
System Time      [Tue 06/14/2010]

Use [ENTER], [TAB] or [SHIFT-TAB] to select a field.
Use [+] or [-] to configure system time.

←→ Select Screen
↑↓ Select Item
Enter Go to SubScreen
F1 General Help
F10 Save and Exit
ESC Exit

v02.61 ©Copyright 1985-2006, American Megatrends, Inc.
  
```

BIOS Menu 1: Main

- **System Overview**

The **System Overview** lists a brief summary of different system components. The fields in **System Overview** cannot be changed. The items shown in the system overview include:

- AMI BIOS: Displays auto-detected BIOS information
 - **Version:** Current BIOS version
 - **Build Date:** Date the current BIOS version was made
 - **ID:** Installed BIOS ID
- Processor: Displays auto-detected CPU specifications
 - **Type:** Names the currently installed processor
 - **Speed:** Lists the processor speed
 - **Count:** The number of CPUs on the motherboard
- System Memory: Displays the auto-detected system memory.
 - **Size:** Lists memory size

The System Overview field also has two user configurable fields:

- **System Time [xx:xx:xx]**

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.

- **System Date [xx/xx/xx]**

Use the **System Date** option to set the system date. Manually enter the day, month and year.

5.3 Advanced

Use the **Advanced** menu (BIOS Menu 2) to configure the CPU and peripheral devices

```

                                BIOS SETUP UTILITY
Main    Advanced  PCIPNP    Boot    Security  Chipset  Exit
-----
Advanced Settings                                Configure CPU
-----
WARNING: Setting wrong values in below sections may cause
system to malfunction

> CPU Configuration
> IDE Configuration
> Hardware Health Configuration
> Embedded Controller Configuration
> USB Configuration

                                  ←→  Select Screen
                                  ↑↓  Select Item
                                  Enter Go to SubScreen
                                  F1   General Help
                                  F10  Save and Exit
                                  ESC  Exit

v02.61 ©Copyright 1985-2006, American Megatrends, Inc.
  
```

BIOS Menu 2: Advanced

ICEROCK-08A Panel PC

5.3.1 CPU Configuration

Use the **CPU Configuration** menu (BIOS Menu 3) to view detailed CPU specifications and configure the CPU.

```

BIOS SETUP UTILITY
Main  Advanced  PCIPNP  Boot  Security  Chipset  Exit
-----
Configure Advanced CPU Settings
Module Version:3F.14
-----
Manufacturer   :Intel@
Intel@ Atom™  Z530 @ 1.60 GHz
Frequency      :1.60GHz
FSB Speed      :533MHz

Cache L1       :24 KB
Cache L2       :512 KB

Ratio Actual Value:12

<=> Select Screen
↑↓ Select Item
Enter Go to SubScreen
F1  General Help
F10 Save and Exit
ESC Exit

v02.61 ©Copyright 1985-2006, American Megatrends, Inc.

```


BIOS Menu 3: CPU Configuration

The CPU Configuration menu lists the following CPU details:

- Manufacturer: Lists the name of the CPU manufacturer
- Brand String: Lists the brand name of the CPU being used
- Frequency: Lists the CPU processing speed
- FSB Speed: Lists the FSB speed
- Cache L1: Lists the CPU L1 cache size
- Cache L2: Lists the CPU L2 cache size

5.3.2 IDE Configuration

Use the **IDE Configuration** menu (BIOS Menu 4) to change and/or set the configuration of the IDE devices installed in the system.

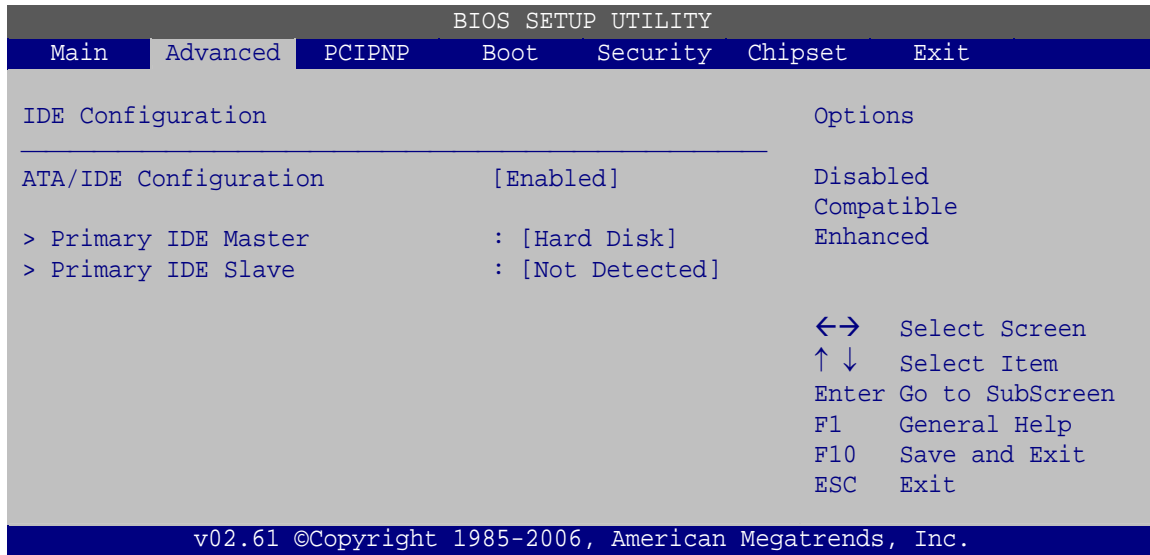

BIOS Menu 4: IDE Configuration

- **ATA/IDE Configuration [Compatible]**

Use the **ATA/IDE Configuration** option to configure the ATA/IDE controller.

- ➔ **Disabled** Disables the on-board ATA/IDE controller.
- ➔ **Compatible** **DEFAULT** The SATA drive is configured on an IDE channel.
- ➔ **Enhanced** Both IDE and SATA channels are configured separately.

- **Legacy IDE Channels [SATA Pri, PATA Sec]**

Use the **Legacy IDE Channels** option to configure SATA devices as normal IDE devices.

- ➔ **SATA Only** Only SATA drives are on the IDE channels. IDE drives are disabled
- ➔ **SATA Pri, PATA Sec** **DEFAULT** SATA drives are configured on the Primary IDE channel. IDE drives on the Secondary IDE channel

ICEROCK-08A Panel PC

➔ **PATA Only** Only the IDE drives are enabled. SATA drives are disabled

- **Configure SATA as [IDE]**

Use the **Configure SATA as** option to configure SATA devices as normal IDE devices.


➔ **IDE DEFAULT** Configures SATA devices as normal IDE device.

➔ **RAID** Used when a RAID setup is installed

➔ **AHCI** Enables advanced SATA drive features

5.3.2.1 IDE Master, IDE Slave

Use the **IDE Master** and **IDE Slave** configuration menu to view both primary and secondary IDE device details and configure the IDE devices connected to the system.

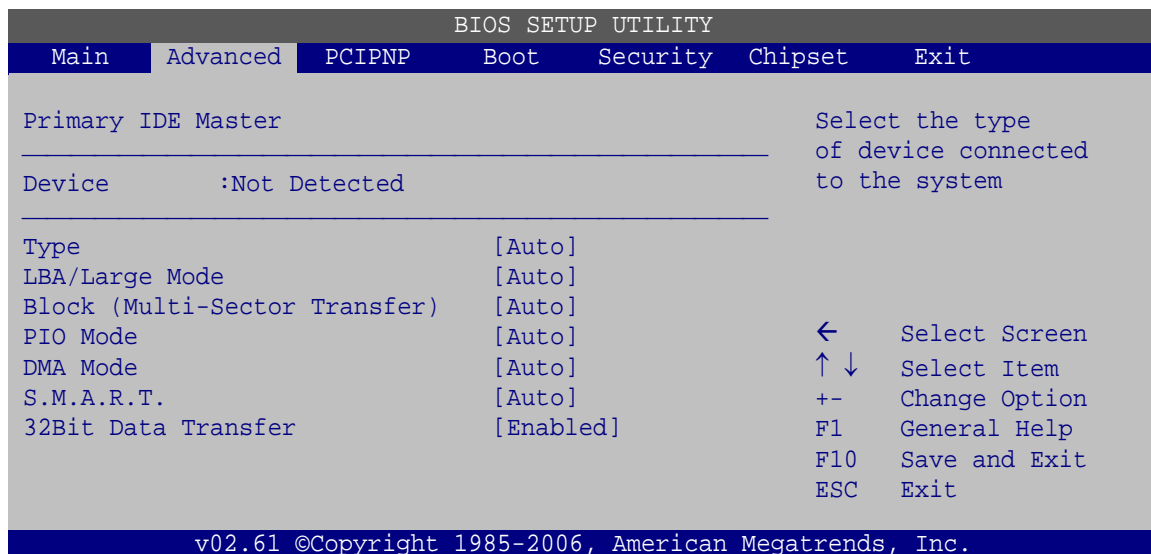

BIOS Menu 5: IDE Master and IDE Slave Configuration

- **Auto-Detected Drive Parameters**

The “grayed-out” items in the left frame are IDE disk drive parameters automatically detected from the firmware of the selected IDE disk drive. The drive parameters are listed as follows:

- **Device:** Lists the device type (e.g. hard disk, CD-ROM etc.)

- **Type:** Indicates the type of devices a user can manually select
- **Vendor:** Lists the device manufacturer
- **Size:** List the storage capacity of the device.
- **LBA Mode:** Indicates whether the LBA (Logical Block Addressing) is a method of addressing data on a disk drive is supported or not.
- **Block Mode:** Block mode boosts IDE drive performance by increasing the amount of data transferred. Only 512 bytes of data can be transferred per interrupt if block mode is not used. Block mode allows transfers of up to 64 KB per interrupt.
- **PIO Mode:** Indicates the PIO mode of the installed device.
- **Async DMA:** Indicates the highest Asynchronous DMA Mode that is supported.
- **Ultra DMA:** Indicates the highest Synchronous DMA Mode that is supported.
- **S.M.A.R.T.:** Indicates whether or not the Self-Monitoring Analysis and Reporting Technology protocol is supported.
- **32Bit Data Transfer:** Enables 32-bit data transfer.

- **Type [Auto]**

Use the **Type** BIOS option select the type of device the AMIBIOS attempts to boot from after the Power-On Self-Test (POST) is complete.

- ➔ **Not Installed** BIOS is prevented from searching for an IDE disk drive on the specified channel.
- ➔ **Auto** **DEFAULT** The BIOS auto detects the IDE disk drive type attached to the specified channel. This setting should be used if an IDE hard disk drive is attached to the specified channel.
- ➔ **CD/DVD** The CD/DVD option specifies that an IDE CD-ROM drive is attached to the specified IDE channel. The BIOS does not attempt to search for other types of IDE disk drives on the specified channel.

ICEROCK-08A Panel PC

➔ **ARMD** This option specifies an ATAPI Removable Media Device. These include, but are not limited to:

ZIP

LS-120

- **LBA/Large Mode [Auto]**

Use the **LBA/Large Mode** option to disable or enable BIOS to auto detects LBA (Logical Block Addressing). LBA is a method of addressing data on a disk drive. In LBA mode, the maximum drive capacity is 137 GB.

➔ **Disabled** BIOS is prevented from using the LBA mode control on the specified channel.

➔ **Auto** **DEFAULT** BIOS auto detects the LBA mode control on the specified channel.

- **Block (Multi Sector Transfer) [Auto]**

Use the **Block (Multi Sector Transfer)** to disable or enable BIOS to auto detect if the device supports multi-sector transfers.

➔ **Disabled** BIOS is prevented from using Multi-Sector Transfer on the specified channel. The data to and from the device occurs one sector at a time.

➔ **Auto** **DEFAULT** BIOS auto detects Multi-Sector Transfer support on the drive on the specified channel. If supported the data transfer to and from the device occurs multiple sectors at a time.

- **PIO Mode [Auto]**

Use the **PIO Mode** option to select the IDE PIO (Programmable I/O) mode program timing cycles between the IDE drive and the programmable IDE controller. As the PIO mode increases, the cycle time decreases.

- **Auto** **DEFAULT** BIOS auto detects the PIO mode. Use this value if the IDE disk drive support cannot be determined.
- **0** PIO mode 0 selected with a maximum transfer rate of 3.3 MB/s
- **1** PIO mode 1 selected with a maximum transfer rate of 5.2 MB/s
- **2** PIO mode 2 selected with a maximum transfer rate of 8.3 MB/s
- **3** PIO mode 3 selected with a maximum transfer rate of 11.1 MB/s
- **4** PIO mode 4 selected with a maximum transfer rate of 16.6 MB/s
(This setting generally works with all hard disk drives manufactured after 1999. For other disk drives, such as IDE CD-ROM drives, check the specifications of the drive.)

▪ **DMA Mode [Auto]**

Use the **DMA Mode** BIOS selection to adjust the DMA mode options.

- **Auto** **DEFAULT** BIOS auto detects the DMA mode. Use this value if the IDE disk drive support cannot be determined.
- **SWDMA0** Single Word DMA mode 0 selected with a maximum data transfer rate of 2.1 MB/s
- **SWDMA1** Single Word DMA mode 1 selected with a maximum data transfer rate of 4.2 MB/s
- **SWDMA2** Single Word DMA mode 2 selected with a maximum data transfer rate of 8.3 MB/s
- **MWDMA0** Multi Word DMA mode 0 selected with a maximum data transfer rate of 4.2 MB/s
- **MWDMA1** Multi Word DMA mode 1 selected with a maximum data transfer rate of 13.3 MB/s
- **MWDMA2** Multi Word DMA mode 2 selected with a maximum data transfer rate of 16.6 MB/s
- **UDMA0** Ultra DMA mode 0 selected with a maximum data transfer rate of 16.6 MB/s

ICEROCK-08A Panel PC

- ➔ **UDMA1** Ultra DMA mode 1 selected with a maximum data transfer rate of 25 MB/s
- ➔ **UDMA2** Ultra DMA mode 2 selected with a maximum data transfer rate of 33.3 MB/s
- ➔ **UDMA3** Ultra DMA mode 3 selected with a maximum data transfer rate of 44 MB/s (To use this mode, it is required that an 80-conductor ATA cable is used.)
- ➔ **UDMA4** Ultra DMA mode 4 selected with a maximum data transfer rate of 66.6 MB/s (To use this mode, it is required that an 80-conductor ATA cable is used.)
- ➔ **UDMA5** Ultra DMA mode 5 selected with a maximum data transfer rate of 99.9 MB/s (To use this mode, it is required that an 80-conductor ATA cable is used.)

- **S.M.A.R.T [Auto]**

Use the **S.M.A.R.T** option to auto-detect, disable or enable Self-Monitoring Analysis and Reporting Technology (SMART) on the drive on the specified channel. **S.M.A.R.T** predicts impending drive failures. The **S.M.A.R.T** BIOS option enables or disables this function.

- ➔ **Auto** **DEFAULT** BIOS auto detects HDD SMART support.
- ➔ **Disabled** Prevents BIOS from using the HDD SMART feature.
- ➔ **Enabled** Allows BIOS to use the HDD SMART feature

- **32Bit Data Transfer [Enabled]**

Use the **32Bit Data Transfer** BIOS option to enables or disable 32-bit data transfers.

- ➔ **Disabled** Prevents the BIOS from using 32-bit data transfers.
- ➔ **Enabled** **DEFAULT** Allows BIOS to use 32-bit data transfers on supported hard disk drives.

5.3.3 Hardware Health Configuration

The **Hardware Health Configuration** menu (BIOS Menu 6) shows the operating temperature, fan speeds and system voltages.

```

BIOS SETUP UTILITY
Main  Advanced  PCIPNP  Boot  Security  Chipset  Exit
-----
Hardware Health Configuration
-----
CPU Temperature           :41°C/105°F
System Temperature       :30°C/86°F

Vcore(VIN1)              :1.024 V
+3.3V(VIN2)              :3.328 V
VBAT(VIN3)               :2.781 V
VCC                      :5.049 V

                                  ←→  Select Screen
                                  ↑↓  Select Item
                                  Enter Go to SubScreen
                                  F1   General Help
                                  F10  Save and Exit
                                  ESC  Exit

v02.61 ©Copyright 1985-2006, American Megatrends, Inc.
  
```

BIOS Menu 6: Hardware Health Configuration

- **Monitored Values**


The following system parameters and values are shown. The system parameters that are monitored are:

- The following system temperatures are monitored:
 - CPU temperature
 - System temperature
- The following core voltages are monitored:
 - Vcore
 - +3.30V
 - VBAT
 - VCC

ICEROCK-08A Panel PC

5.3.3.1 Embedded Controller Configuration

The **Embedded Controller Configuration** menu (BIOS Menu 7) allows the advanced power management options to be configured.

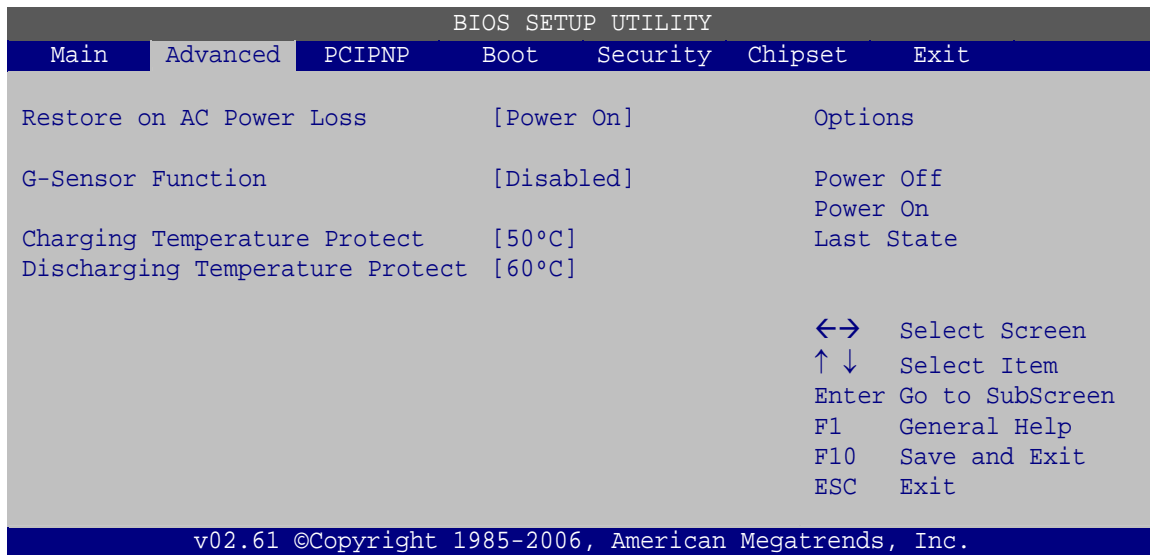

BIOS Menu 7: APM Configuration

- **Restore on AC Power Loss [Last State]**

Use the **Restore on AC Power Loss** BIOS option to specify what state the system returns to if there is a sudden loss of power to the system.

- ➔ **Power Off** The system remains turned off
- ➔ **Power On** **DEFAULT** The system turns on
- ➔ **Last State** The system returns to its previous state. If it was on, it turns itself on. If it was off, it remains off.

- **G-Sensor Function [On/Off]**

Use the **G-Sensor Function** BIOS to enable the G-Sensor function. When enabled, G-Sensor will sense the orientation of the tablet and automatically switch between portrait or landscape display mode.

- ➔ **Disabled** **DEFAULT** The G-Sensor function is disabled.
- ➔ **Enabled** The G-Sensor function is enabled

- **Charging Temperature Protect [50°C]**


Battery charging will stop if this temperature is exceeded and will resume at a temperature that is 5°C cooler than this temperature. This value cannot be changed.

- **Discharging Temperature Protect [60°C]**

Battery discharging will stop if this temperature is exceeded and the system will shutdown. This value cannot be changed.

5.3.4 USB Configuration

Use the **USB Configuration** menu (BIOS Menu 8) to read USB configuration information and configure the USB settings.

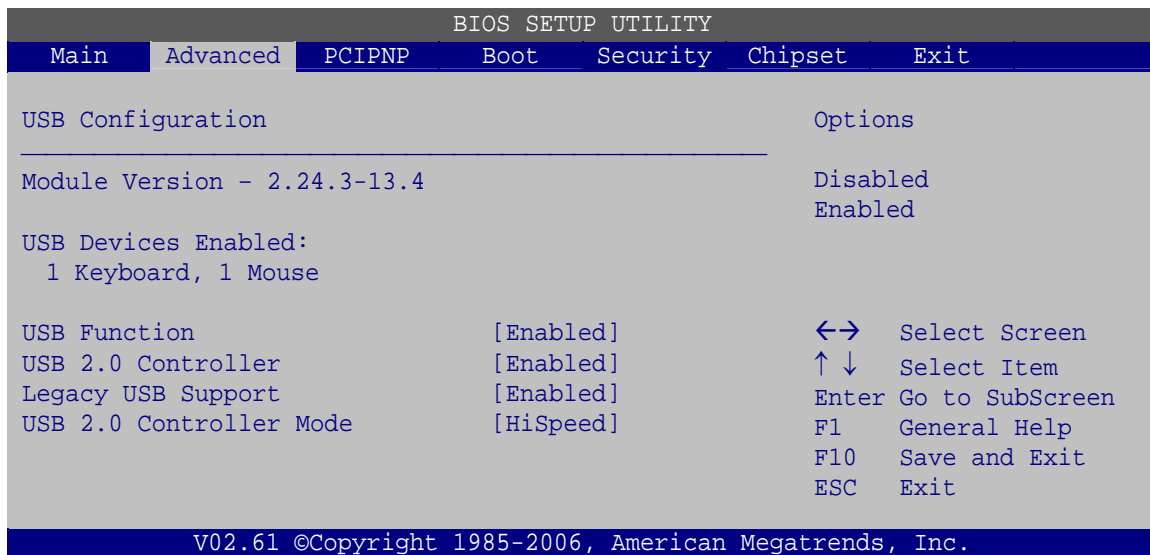

BIOS Menu 8: USB Configuration

- **USB Configuration**

The **USB Configuration** field shows the system USB configuration. The items listed are:

- Module Version: x.xxxxx.xxxxx

ICEROCK-08A Panel PC

- **USB Devices Enabled**

The **USB Devices Enabled** field lists the USB devices that are enabled on the system

- **USB Function [Enabled]**

Use the **USB Function** BIOS option to enable or disable USB function support.

- ➔ **Disabled** USB function support disabled
- ➔ **Enabled** **DEFAULT** USB function support enabled

- **USB 2.0 Controller [Enabled]**

Use the **USB 2.0 Controller** BIOS option to enable or disable the USB 2.0 controller

- ➔ **Disabled** USB 2.0 controller disabled
- ➔ **Enabled** **DEFAULT** USB 2.0 controller enabled

- **Legacy USB Support [Enabled]**

Use the **Legacy USB Support** BIOS option to enable USB mouse and USB keyboard support.

Normally if this option is not enabled, any attached USB mouse or USB keyboard does not become available until a USB compatible operating system is fully booted with all USB drivers loaded. When this option is enabled, any attached USB mouse or USB keyboard can control the system even when there is no USB driver loaded onto the system.

- ➔ **Disabled** Legacy USB support disabled
- ➔ **Enabled** **DEFAULT** Legacy USB support enabled
- ➔ **Auto** Legacy USB support disabled if no USB devices are connected


- **USB2.0 Controller Mode [HiSpeed]**

Use the **USB2.0 Controller Mode** option to set the speed of the USB2.0 controller.

- ➔ **FullSpeed** The controller is capable of operating at 12 Mb/s
- ➔ **HiSpeed** **DEFAULT** The controller is capable of operating at 480 Mb/s

5.3.4.1 USB Mass Storage Device Configuration

Use the **USB Mass Storage Device Configuration** menu (BIOS Menu 9) to configure USB mass storage class devices.

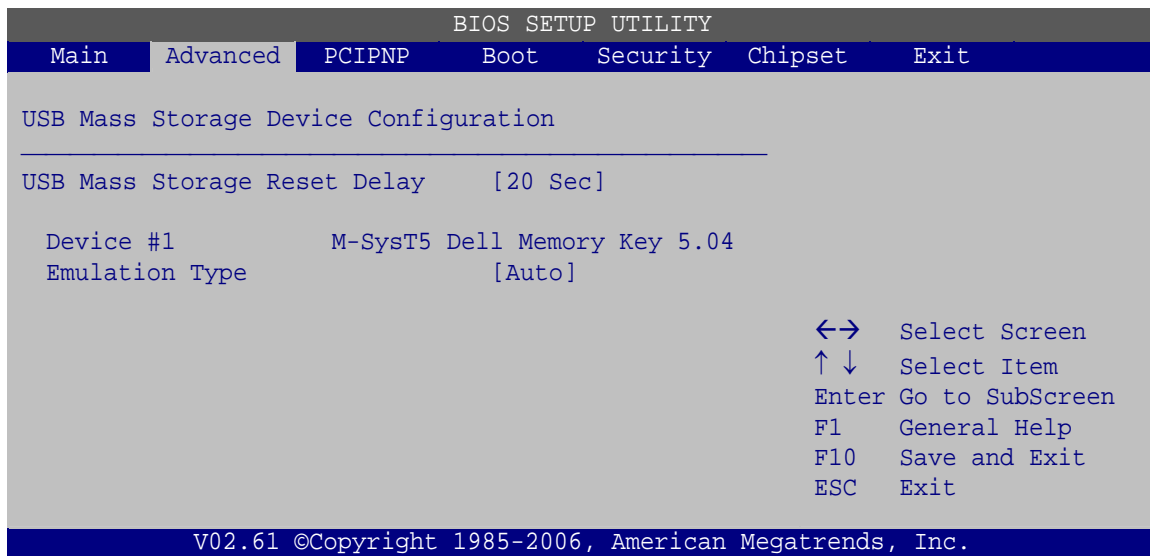

BIOS Menu 9: USB Mass Storage Device Configuration

- **USB Mass Storage Reset Delay [20 Sec]**

Use the **USB Mass Storage Reset Delay** option to set the number of seconds POST waits for the USB mass storage device after the start unit command.

- ➔ **10 Sec** POST waits 10 seconds for the USB mass storage device after the start unit command.
- ➔ **20 Sec** **DEFAULT** POST waits 20 seconds for the USB mass storage device after the start unit command.
- ➔ **30 Sec** POST waits 30 seconds for the USB mass storage device after the start unit command.
- ➔ **40 Sec** POST waits 40 seconds for the USB mass storage device after the start unit command.

ICEROCK-08A Panel PC

- **Device ##**

The **Device##** field lists the USB devices that are connected to the system.

- **Emulation Type [Auto]**

Use the **Emulation Type** BIOS option to specify the type of emulation BIOS has to provide for the USB device.

- ➔ **Auto** **DEFAULT** BIOS auto-detects the current USB.
- ➔ **Floppy** The USB device will be emulated as a floppy drive. The device can be either A: or B: responding to INT13h calls that return DL = 0 or DL = 1 respectively.
- ➔ **Forced FDD** Allows a hard disk image to be connected as a floppy image. This option works only for drives formatted with FAT12, FAT16 or FAT32.
- ➔ **Hard Disk** Allows the USB device to be emulated as hard disk responding to INT13h calls that return DL values of 80h or above.
- ➔ **CDROM** Assumes the CD-ROM is formatted as bootable media. All the devices that support block sizes greater than 512 bytes can only be booted using this option.


5.4 PCI/PnP

Use the **PCI/PnP** menu (BIOS Menu 10) to configure advanced PCI and PnP settings.



WARNING!

Setting wrong values for the BIOS selections in the PCIPnP BIOS menu may cause the system to malfunction.

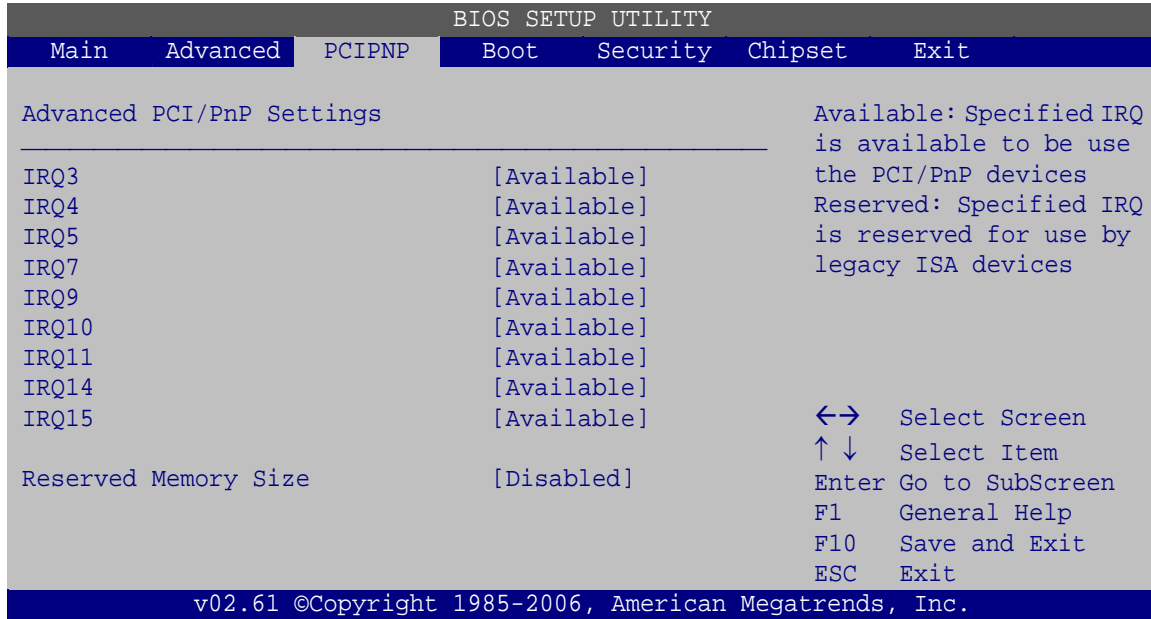

BIOS Menu 10: PCI/PnP Configuration

- **IRQ# [Available]**

Use the **IRQ#** address to specify what IRQs can be assigned to a particular peripheral device.

- ➔ **Available** **DEFAULT** The specified IRQ is available to be used by PCI/PnP devices
- ➔ **Reserved** The specified IRQ is reserved for use by Legacy ISA devices

Available IRQ addresses are:

- IRQ3
- IRQ4
- IRQ5
- IRQ7
- IRQ9
- IRQ10
- IRQ 11
- IRQ 14
- IRQ 15

ICEROCK-08A Panel PC

- **DMA Channel# [Available]**

Use the **DMA Channel#** option to assign a specific DMA channel to a particular PCI/PnP device.

- ➔ **Available** **DEFAULT** The specified DMA is available to be used by PCI/PnP devices
- ➔ **Reserved** The specified DMA is reserved for use by Legacy ISA devices

Available DMA Channels are:

- DM Channel 0
- DM Channel 1
- DM Channel 3
- DM Channel 5
- DM Channel 6
- DM Channel 7

- **Reserved Memory Size [Disabled]**

Use the **Reserved Memory Size** BIOS option to specify the amount of memory that should be reserved for legacy ISA devices.

- ➔ **Disabled** **DEFAULT** No memory block reserved for legacy ISA devices
- ➔ **16K** 16 KB reserved for legacy ISA devices
- ➔ **32K** 32 KB reserved for legacy ISA devices
- ➔ **64K** 64 KB reserved for legacy ISA devices

5.5 Boot

Use the **Boot** menu (BIOS Menu 11) to configure system boot options.

```

BIOS SETUP UTILITY
Main  Advanced  PCIPNP  Boot  Security  Chipset  Exit
-----
Boot Settings                                     Configure settings
                                                during system boot.
> Boot Settings Configuration
> Boot Device Priority
> Hard Disk Drives
> CD/DVD Drives
> Removable Drives
                                                ←→  Select Screen
                                                ↑↓  Select Item
Enter  Go to SubScreen
F1    General Help
F10   Save and Exit
ESC   Exit

v02.61 ©Copyright 1985-2006, American Megatrends, Inc.

```

BIOS Menu 11: Boot

5.5.1 Boot Settings Configuration

Use the **Boot Settings Configuration** menu (BIOS Menu 12) to configure advanced system boot options.

```

BIOS SETUP UTILITY
Main  Advanced  PCIPNP  Boot  Security  Chipset  Exit
-----
Boot Settings Configuration                     Allows BIOS to skip
                                                certain tests while
Quick Boot                                     [Enabled]                       booting. This will
Quiet Boot                                     [Enabled]                       decrease the time
AddOn ROM Display Mode                       [Force BIOS]                    needed to boot the
Bootup Num-Lock                               [On]                             system.
Boot From LAN (RTL8111CP)                   [Disabled]
                                                ←→  Select Screen
                                                ↑↓  Select Item
Enter  Go to SubScreen
F1    General Help
F10   Save and Exit
ESC   Exit

v02.61 ©Copyright 1985-2006, American Megatrends, Inc.

```

BIOS Menu 12: Boot Settings Configuration

ICEROCK-08A Panel PC

- **Quick Boot [Enabled]**

Use the **Quick Boot** BIOS option to make the computer speed up the boot process.

- ➔ **Disabled** No POST procedures are skipped
- ➔ **Enabled DEFAULT** Some POST procedures are skipped to decrease the system boot time

- **Quiet Boot [Enabled]**

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

- ➔ **Disabled DEFAULT** Normal POST messages displayed
- ➔ **Enabled** OEM Logo displayed instead of POST messages

- **AddOn ROM Display Mode [Force BIOS]**

Use the **AddOn ROM Display Mode** option to allow add-on ROM (read-only memory) messages to be displayed.

- ➔ **Force BIOS DEFAULT** The system forces third party BIOS to display during system boot.
- ➔ **Keep Current** The system displays normal information during system boot.

- **Bootup Num-Lock [On]**

Use the **Bootup Num-Lock** BIOS option to specify if the number lock setting must be modified during boot up.

- ➔ **Off** Does not enable the keyboard Number Lock automatically. To use the 10-keys on the keyboard, press the Number Lock key located on the upper left-hand corner of the 10-key pad. The Number Lock LED on the keyboard lights up when the Number Lock is engaged.

- ➔ **On** **DEFAULT** Allows the Number Lock on the keyboard to be enabled automatically when the computer system boots up. This allows the immediate use of the 10-key numeric keypad located on the right side of the keyboard. To confirm this, the Number Lock LED light on the keyboard is lit.


- **Boot From LAN (RTL81111CP) [Disabled]**

Use the **BOOT From LAN Support** option to enable the system to be booted from a remote system.

- ➔ **Disabled** **DEFAULT** Cannot be booted from a remote system through the LAN
- ➔ **Enabled** **DEFAULT** Can be booted from a remote system through the LAN

5.5.2 Boot Device Priority

Use the **Boot Device Priority** menu (BIOS Menu 13) to specify the boot sequence from the available devices. The drive sequence also depends on the boot sequence in the individual device section.

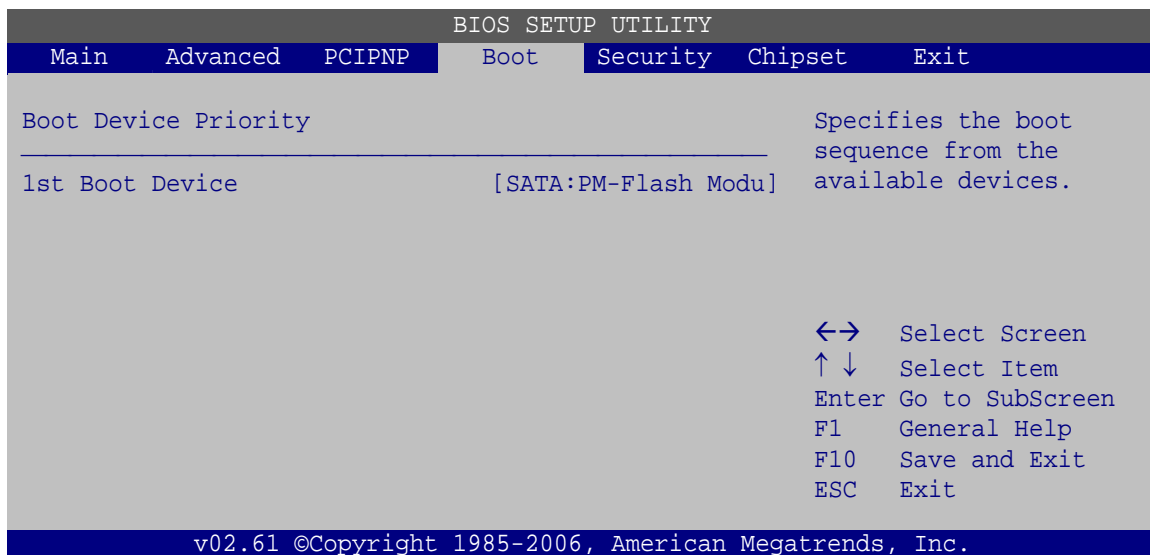

BIOS Menu 13: Boot Device Priority Settings

ICEROCK-08A Panel PC

5.5.3 Hard Disk Drives

Use the **Hard Disk Drives** menu to specify the boot sequence of the available HDDs. Only installed hard drives are shown.

```

BIOS SETUP UTILITY
Main  Advanced  PCIPNP  Boot  Security  Chipset  Exit
-----
Hard Disk Drives                               Specifies the boot
sequence from the
> 1st Drive                                   [SATA:PM-Flash Modu] available devices.

                                                ←→  Select Screen
                                                ↑↓  Select Item
Enter  Go to SubScreen
F1     General Help
F10    Save and Exit
ESC    Exit

v02.61 ©Copyright 1985-2006, American Megatrends, Inc.

```

BIOS Menu 14: Hard Disk Drives

5.5.4 Removable Drives

Use the **Removable Drives** menu (BIOS Menu 15) to specify the boot sequence of the removable drives. Only connected drives are shown.

```

BIOS SETUP UTILITY
Main  Advanced  PCIPNP  Boot  Security  Chipset  Exit
-----
Hard Disk Drives                               Specifies the boot
sequence from the
> 1st Drive                                   [Removable Drive 1] available devices.
> 2nd Drive                                   [Removable Drive 2]
> 3rd Drive                                   [Removable Drive 3]

                                                ←→  Select Screen
                                                ↑↓  Select Item
Enter  Go to SubScreen
F1     General Help
F10    Save and Exit
ESC    Exit

v02.61 ©Copyright 1985-2006, American Megatrends, Inc.

```

BIOS Menu 15: Removable Drives

5.5.5 CD/DVD Drives

Use the **CD/DVD Drives** menu to specify the boot sequence of the available CD/DVD drives. When the menu is opened, the CD drives and DVD drives connected to the system are listed as shown below:

- 1st Drive [CD/DVD: PM-(part ID)]
- 2nd Drive [HDD: PS-(part ID)]
- 3rd Drive [HDD: SM-(part ID)]
- 4th Drive [HDD: SM-(part ID)]



NOTE:

Only the drives connected to the system are shown. For example, if only two CDs or DVDs are connected only “**1st Drive**” and “**2nd Drive**” are listed.

The boot sequence from the available devices is selected. If the “**1st Drive**” option is selected a list of available CD/DVD drives is shown. Select the first CD/DVD drive the system boots from. If the “**1st Drive**” is not used for booting this option may be disabled.

```

BIOS SETUP UTILITY
Main  Advanced  PCIPNP  Boot  Security  Chipset  Exit
-----
Hard Disk Drives
-----
> 1st Drive          [CD/DVD 1]
> 2nd Drive          [CD/DVD 2]
> 3rd Drive          [CD/DVD 3]

                                  Specifies the boot
                                  sequence from the
                                  available devices.


                                  ←→  Select Screen
                                  ↑↓  Select Item
                                  Enter Go to SubScreen
                                  F1   General Help
                                  F10  Save and Exit
                                  ESC  Exit

v02.61 ©Copyright 1985-2006, American Megatrends, Inc.
    
```

BIOS Menu 16: CD/DVD Drives

5.6 Security

Use the **Security** menu (BIOS Menu 17) to set system and user passwords.

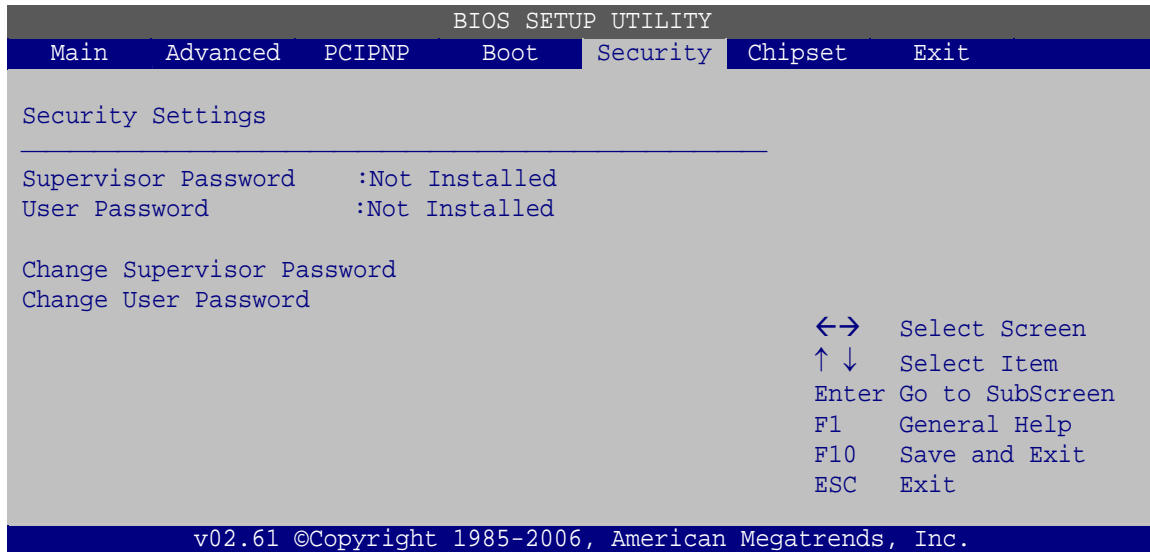

BIOS Menu 17: Security

- **Change Supervisor Password**

Use the **Change Supervisor Password** to set or change a supervisor password. The default for this option is **Not Installed**. If a supervisor password must be installed, select this field and enter the password. After the password has been added, **Install** appears next to **Change Supervisor Password**.

- **Change User Password**

Use the **Change User Password** to set or change a user password. The default for this option is **Not Installed**. If a user password must be installed, select this field and enter the password. After the password has been added, **Install** appears next to **Change User Password**.

5.7 Chipset

Use the **Chipset** menu (BIOS Menu 18) to access the Northbridge and Southbridge configuration menus



WARNING!

Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.

```
BIOS SETUP UTILITY
Main  Advanced  PCIPNP  Boot  Security  Chipset  Exit
-----
Advanced Chipset Settings
-----
> Northbridge Configuration
> Southbridge Configuration

                                  ←→  Select Screen
                                  ↑↓  Select Item
                                  Enter Go to SubScreen
                                  F1   General Help
                                  F10  Save and Exit
                                  ESC  Exit


v02.61 ©Copyright 1985-2006, American Megatrends, Inc.
```

BIOS Menu 18: Chipset

ICEROCK-08A Panel PC

5.7.1 Northbridge Configuration

Use the **Northbridge Chipset Configuration** menu (BIOS Menu 19) to configure the Northbridge chipset.

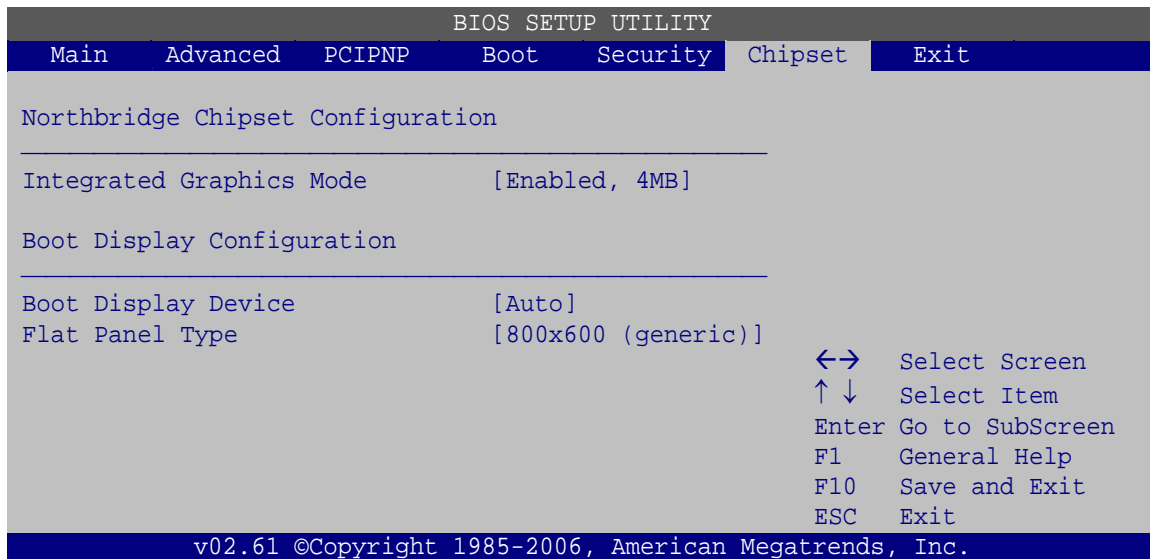

BIOS Menu 19: Northbridge Chipset Configuration

- **Internal Graphics Mode Select [Enable, 4 MB]**

Use the **Internal Graphic Mode Select** option to specify the amount of system memory that can be used by the internal graphics device.

- ➔ **Disable** Disabled the onboard graphics
- ➔ **Enable, 1 MB** Dedicates 1 MB of main memory for graphics
- ➔ **Enable, 4 MB** **DEFAULT** Dedicates 4 MB of main memory for graphics
- ➔ **Enable, 8 MB** Dedicated 8 MB of main memory for graphics

- **Boot Display Device [Auto]**

Selects which graphics output to use first after the system is turned on. Auto selects the first available device.

- Auto **DEFAULT**
- LVDS

- CRT

- **LFP Panel Type**


Use the **Panel Type** to determine the LCD panel resolution. Configuration options are listed below:

- 640x480 (generic)
- 800x600 (generic) **DEFAULT**
- 1024x768 (generic)
- 640x480 (NEC 8.4")
- 800x480 (NEC 9")
- 1024x600 (TMD 5.61")
- 1024x600 (Samsung 4.8")
- 1024x768 (Samsung 15")
- 1280x768 (Sharp 7.2")
- 1280x800 (Samsung 15.4")
- 1024x768 24bit
- 800x480 24bit
- 1360x768 24bit VESA
- 1366x768 18bit
- 1366x768 24bit

ICEROCK-08A Panel PC

5.7.2 Southbridge Configuration

Use the **Southbridge Configuration** menu (BIOS Menu 20) to configure the Southbridge chipset.

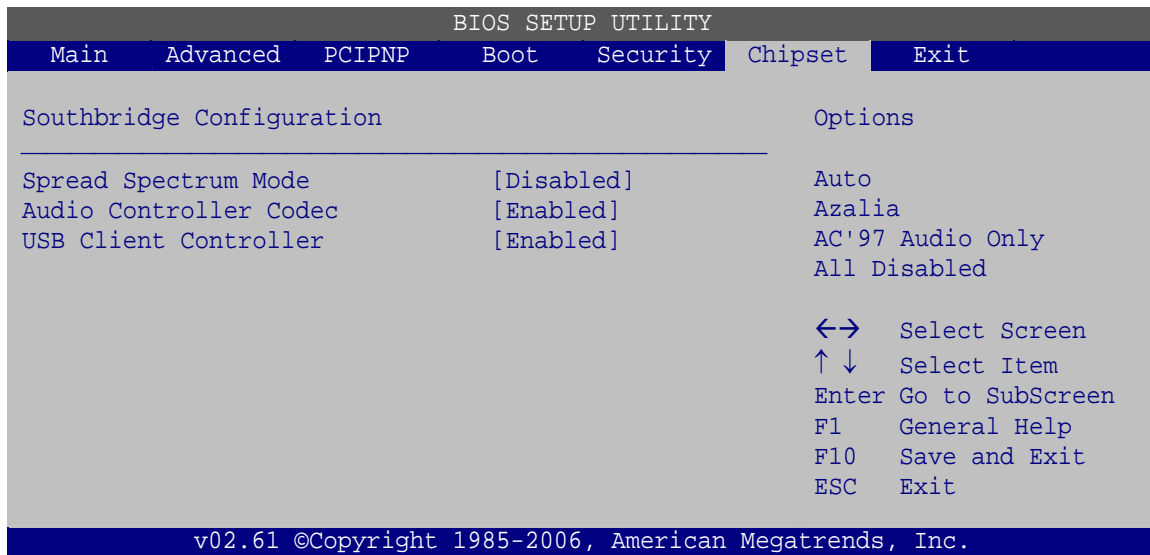

BIOS Menu 20: Southbridge Chipset Configuration

- **Spread Spectrum [Disabled]**

Use the **Spread Spectrum** option to reduce the EMI. Excess EMI is generated when the system clock generator pulses have extreme values. Spreading the pulse spectrum modulates changes in the extreme values from spikes to flat curves, thus reducing the EMI. This benefit may in some cases be outweighed by problems with timing-critical devices, such as a clock-sensitive SCSI device.

- ➔ **Disabled** DEFAULT EMI not reduced
- ➔ **Enabled** EMI reduced

- **Audio Controller [Auto]**

Use the **HDA Controller** option to enable or disable High Definition audio codec.

- ➔ **Azalia** DEFAULT Enabled High Definition audio
- ➔ **All disabled** No audio


- **USB Client Controller**

Use the **USB Client Controller** option to enable or disable the USB client controller.

- ➔ **Enabled** **DEFAULT** The USB client controller is enabled.
- ➔ **Disabled** The USB client controller is disabled.

5.8 Exit

Use the **Exit** menu (BIOS Menu 21) to load default BIOS values, optimal failsafe values and to save configuration changes.

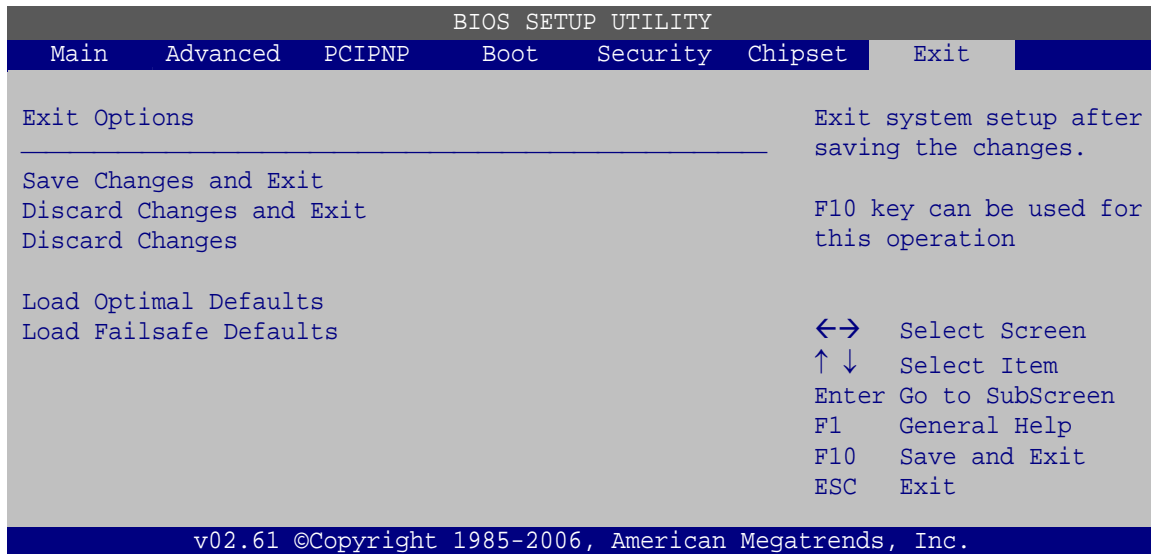

BIOS Menu 21: Exit

- **Save Changes and Exit**

Use the **Save Changes and Exit** option to save the changes made to the BIOS options and to exit the BIOS configuration setup program.

- **Discard Changes and Exit**

Use the **Discard Changes and Exit** option to exit the BIOS configuration setup program without saving the changes made to the system.

ICEROCK-08A Panel PC

- **Discard Changes**

Use the **Discard Changes** option to discard the changes and remain in the BIOS configuration setup program.

- **Load Optimal Defaults**

Use the **Load Optimal Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F9 key can be used for this operation.**

- **Load Failsafe Defaults**

Use the **Load Failsafe Defaults** option to load failsafe default values for each of the parameters on the Setup menus. **F8 key can be used for this operation.**

Chapter

6

System Maintenance

ICEROCK-08A Panel PC

6.1 System Maintenance Introduction

If the components of the ICEROCK-08A fail they must be replaced, such as the wireless LAN module or the motherboard. Please contact the system reseller or vendor to purchase the replacement parts.

6.2 Motherboard Replacement

In the case of motherboard failure, please contact an IEI sales representative, reseller or system vendor. The motherboard is accessible after opening the rear cover.

Appendix

A

Safety Precautions

ICEROCK-08A Panel PC



WARNING:

The precautions outlined in this chapter should be strictly followed. Failure to follow these precautions may result in permanent damage to the ICEROCK-08A.

A.1 Safety Precautions

Please follow the safety precautions outlined in the sections that follow:

A.1.1 General Safety Precautions

Please ensure the following safety precautions are adhered to at all times.

- **Follow the electrostatic precautions** outlined below whenever the ICEROCK-08A is opened.
- **Make sure the power is turned off and the power cord is disconnected** whenever the ICEROCK-08A is being installed, moved or modified.
- **Do not apply voltage levels that exceed the specified voltage range.** Doing so may cause fire and/or an electrical shock.
- **Electric shocks can occur** if the ICEROCK-08A chassis is opened when the ICEROCK-08A is running.
- **Do not drop or insert any objects** into the ventilation openings of the ICEROCK-08A.
- **If considerable amounts of dust, water, or fluids enter the ICEROCK-08A,** turn off the power supply immediately, unplug the power cord, and contact the ICEROCK-08A vendor.
- **DO NOT** do the following:
 - **DO NOT** drop the ICEROCK-08A against a hard surface.
 - **DO NOT** strike or exert excessive force onto the LCD panel.
 - **DO NOT** touch any of the LCD panels with a sharp object
 - **DO NOT** use the ICEROCK-08A in a site where the ambient temperature exceeds the rated temperature

A.1.2 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the installation of the ICEROCK-08A may result in permanent damage to the ICEROCK-08A and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the ICEROCK-08A. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the ICEROCK-08A is opened and any of the electrical components are handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** Wearing a simple anti-static wristband can help to prevent ESD from damaging any electrical component.
- **Self-grounding:** Before handling any electrical component, touch any grounded conducting material. During the time the electrical component is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad:** When configuring or working with an electrical component, place it on an anti-static pad. This reduces the possibility of ESD damage.
- **Only handle the edges of the electrical component:** When handling the electrical component, hold the electrical component by its edges.

A.2 Maintenance and Cleaning Precautions

When maintaining or cleaning the ICEROCK-08A, please follow the guidelines below.

A.2.1 Maintenance and Cleaning

Prior to cleaning any part or component of the ICEROCK-08A, please read the details below.

ICEROCK-08A Panel PC

- Except for the LCD panel, never spray or squirt liquids directly onto any other components. To clean the LCD panel, gently wipe it with a piece of soft dry cloth or a slightly moistened cloth.
- The interior does not require cleaning. Keep fluids away from the interior.
- Be careful not to damage the small, removable components inside.
- Turn off before cleaning.
- Never drop any objects or liquids through the openings.
- Be cautious of any possible allergic reactions to solvents or chemicals used when cleaning.
- Avoid eating, drinking and smoking nearby.

A.2.2 Cleaning Tools

Some components may only be cleaned using a product specifically designed for the purpose. In such case, the product will be explicitly mentioned in the cleaning tips. Below is a list of items to use for cleaning.

- **Cloth** – Although paper towels or tissues can be used, a soft, clean piece of cloth is recommended.
- **Water or rubbing alcohol** – A cloth moistened with water or rubbing alcohol should be used.
- **Using solvents** – The use of solvents is not recommended as they may damage the plastic parts.
- **Vacuum cleaner** – Using a vacuum specifically designed for computers is one of the best methods of cleaning. Dust and dirt can restrict the airflow and cause circuitry to corrode
- **Cotton swabs** - Cotton swabs moistened with rubbing alcohol or water are excellent tools for wiping hard to reach areas.
- **Foam swabs** - Whenever possible, it is best to use lint free swabs such as foam swabs for cleaning.

Appendix

B

One Key Recovery

B.1 One Key Recovery Introduction

The IEI one key recovery is an easy-to-use front end for the Norton Ghost system backup and recovery tool. The one key recovery provides quick and easy shortcuts for creating a backup and reverting to that backup or for reverting to the factory default settings.

To create the system backup the main storage device must be split into two partitions (three partitions for Linux). The first partition will be for the operating system, while the second partition will be invisible to the operating system and contain the backup made by the one key recovery software.

B.1.1 System Requirement

The partition created for recovery images must be big enough to contain both the factory default image and the user backup image. The size must be calculated before creating the partitions. Please take the following table as a reference when calculating the size of the partition.

	OS	OS Image after Ghost	Compression Ratio
Windows® 7	7 GB	5 GB	70%
Windows® XPE	776 MB	560 MB	70%
Windows® CE 6.0	36 MB	28 MB	77%



NOTE:

Specialized tools are required to change the partition size if the operating system is already installed.

B.1.2 Supported Operating System

The recovery CD is compatible with both Microsoft Windows and Linux operating system (OS). The supported OS versions are listed below.

- Microsoft Windows
 - Windows XP (Service Pack 2 or 3 required)
 - Windows Vista

- Windows 7
- Windows CE 5.0
- Windows CE 6.0
- Windows XP Embedded
- Linux
 - Fedora Core 12 (Constantine)
 - Fedora Core 11 (Leonidas)
 - Fedora Core 10 (Cambridge)
 - Fedora Core 8 (Werewolf)
 - Fedora Core 7 (Moonshine)
 - RedHat RHEL-5.4
 - RedHat 9 (Ghirke)
 - Ubuntu 8.10 (Intrepid)
 - Ubuntu 7.10 (Gutsy)
 - Ubuntu 6.10 (Edgy)
 - Debian 5.0 (Lenny)
 - Debian 4.0 (Etch)
 - SuSe 11.2
 - SuSe 10.3

**NOTE:**

Installing unsupported OS versions may cause the recovery tool to fail.

ICEROCK-08A Panel PC



NOTE:

The recovery CD can only be used with IEI products. The software will fail to run and a warning message will appear when used on non-IEI hardware.



B.2 Setup Procedure for Windows

Prior to using the recovery tool to backup or restore system, a few setup procedures are required.

- Step 1:** Hardware and BIOS setup
- Step 2:** Create partitions
- Step 3:** Install operating system, drivers and system applications.
- Step 4:** Build-up recovery partition
- Step 5:** Create factory default image

The detailed descriptions are described in the following sections.

**NOTE:**

The setup procedures described below are for Microsoft Windows operating system users. For Linux system, most setup procedures are the same with Microsoft Windows except for several steps which is described in **Section B.3**.

B.2.1 Hardware and BIOS Setup

- Step 1:** Make sure the system is powered off and unplugged.
- Step 2:** Install a hard driver or SSD in the ICEROCK-08A. An unformatted and unpartitioned disk is recommended.
- Step 3:** Connect an optical disk drive to the ICEROCK-08A and insert the recovery CD.
- Step 4:** Turn on the system.
- Step 5:** Press the <DELETE> key as soon as the system is turned on to enter the BIOS.
- Step 6:** Select the connected optical disk drive as the 1st boot device. (**Boot → Boot Device Priority → 1st Boot Device**).
- Step 7:** Save changes and restart the computer. Continue to the next section for instructions on partitioning the internal storage.

B.2.2 Create Partitions

- Step 1:** Put the recovery CD in the optical drive.
- Step 2:** Turn on the system.
- Step 3:** When prompted, press any key to boot from the recovery CD. It will take a while to launch the recovery tool. Please be patient.
- Step 4:** The recovery tool setup menu is shown as below.

ICEROCK-08A Panel PC

```
C:\X:\I386\system32\cmd.exe

1.Ghost Execution
2.System Configuration For Windows
3.System Configuration For Linux
4.Exit
5.CMD
Type the number to print text._
```

Figure B-1: Recovery Tool Setup Menu

Step 5: Press <5> then <Enter>.

```
C:\X:\I386\system32\cmd.exe

1.Ghost Execution
2.System Configuration For Windows
3.System Configuration For Linux
4.Exit
5.CMD
Type the number to print text.5
```

Figure B-2: Command Mode

Step 6: The command prompt window appears. Type the following commands (marked in red) to create two partitions. One is for the OS installation; the other is for saving recovery files and images which will be an invisible partition.
(Press <Enter> after entering each line below)

```
system32>diskpart
DISKPART>list vol
DISKPART>sel disk 0
DISKPART>create part pri size= ____
DISKPART>assign letter=N
DISKPART>create part pri size= ____
DISKPART>assign letter=F
DISKPART>exit
system32>format N: /fs:ntfs /q /y
system32>format F: /fs:ntfs /q /v:Recovery /y
system32>exit
```

```

X:\I386\SYSTEM32\CMD.EXE
X:\I386\SYSTEM32>diskpart → Starts the Microsoft disk partitioning tool.
Microsoft DiskPart version 5.2.3790.1830
Copyright (C) 1999-2001 Microsoft Corporation.
On computer: MININT-JUC

DISKPART>list vol → Show partition information

Volume ### Ltr Label Fs Type Size Status Info
-----
Volume 0 X CD_ROM CDFS DUD-ROM 405 MB Healthy Boot
Volume 1 D FAT32 Removeable 3854 MB Healthy

DISKPART>sel disk 0 → Select a disk
Disk 0 is now the selected disk.

DISKPART>create part pri size=2000 → Create partition 1 and assign a size.
This partition is for OS installation.
DiskPart succeeded in creating the specified partition.

DISKPART>assign letter=N → Assign partition 1 a code name (N).
DiskPart successfully assigned the drive letter or mount point.

DISKPART>create part pri size=1800 → Create partition 2 and assign a size.
This partition is for recovery images.
DiskPart succeeded in creating the specified partition.

DISKPART>assign letter=F → Assign partition 2 a code name (F).
DiskPart successfully assigned the drive letter or mount point.

DISKPART>exit → Exit diskpart
X:\I386\SYSTEM32>format n: /fs:ntfs /q /y → Format partition 1 (N) as NTFS format.
The type of the file system is RAW.
The new file system is NTFS.
QuickFormatting 2000M
Creating file system structures.
Format complete.
2048254 KB total disk space.
2035620 KB are available.

X:\I386\SYSTEM32>format f: /fs:ntfs /q /v:Recovery /y → Formate partition 2 (F) as NTFS formate and
name it as "Recovery".
The type of the file system is RAW.
The new file system is NTFS.
QuickFormatting 1804M
Creating file system structures.
Format complete.
1847474 KB total disk space.
1835860 KB are available.

X:\I386\SYSTEM32>exit → Exit Windows PE
  
```

Figure B-3: Partition Creation Commands



NOTE:

Use the following commands to check if the partitions were created successfully.

```

X:\I386\SYSTEM32>diskpart
Microsoft DiskPart version 5.2.3790.1830
Copyright (C) 1999-2001 Microsoft Corporation.
On computer: MININT-JUC

DISKPART> sel disk 0
Disk 0 is now the selected disk.

DISKPART> list part

   Partition ###   Type              Size              Offset
-----
   Partition 1     Primary           2000 MB           32 KB
   Partition 2     Primary           1804 MB           2000 MB

DISKPART> exit
    
```

Step 7: Press any key to exit the recovery tool and automatically reboot the system.

Please continue to the following procedure: Build-up Recovery Partition.

B.2.3 Install Operating System, Drivers and Applications

Install the operating system onto the unlabelled partition. The partition labeled as "Recovery" is for use by the system recovery tool and should not be used for installing the operating system or any applications.



NOTE:

The operating system installation program may offer to reformat the chosen partition. DO NOT format the partition again. The partition has already been formatted and is ready for installing the new operating system.

To install the operating system, insert the operating system installation CD into the optical drive. Restart the computer and follow the installation instructions.

B.2.4 Build-up Recovery Partition

Step 1: Put the recover CD in the optical drive.

Step 2: Start the system.

Step 3: Press any key to boot from the recovery CD. It will take a while to launch the recovery tool. Please be patient.

Step 4: When the recovery tool setup menu appears, press <2> then <Enter>.

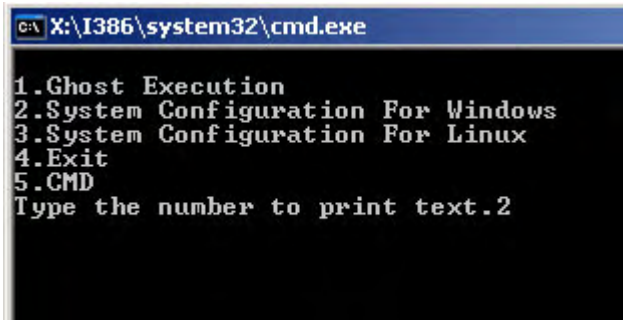


Figure B-4: System Configuration for Windows

Step 5: The Symantec Ghost window appears and starts configuring the system to build-up a recovery partition. In this process, the partition which is created for recovery files in **Section B.2.2** is hidden and the recovery tool is saved in this partition.


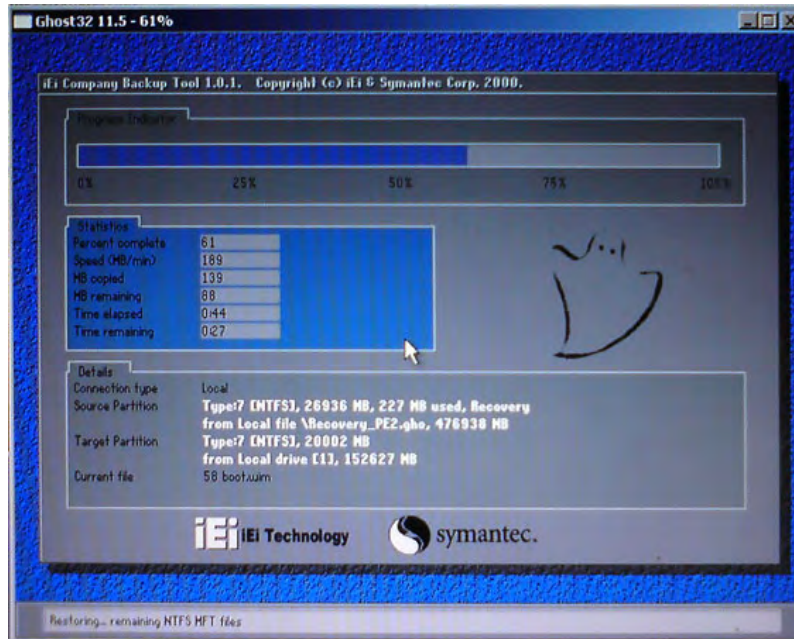


Figure B-5: Build-up Recovery Partition

ICEROCK-08A Panel PC

Step 6: After completing the system configuration, press any key in the following window to reboot the system.

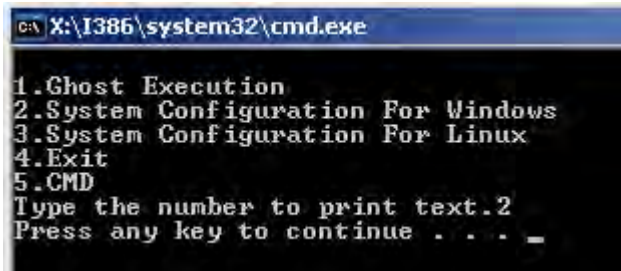

```
C:\X:\I386\system32\cmd.exe
1.Ghost Execution
2.System Configuration For Windows
3.System Configuration For Linux
4.Exit
5.CMD
Type the number to print text.2
Press any key to continue . . . _
```

Figure B-6: Press any key to continue

Step 7: Eject the recovery CD.

B.2.5 Create Factory Default Image



NOTE:

Before creating the factory default image, please configure the system to a factory default environment, including driver and application installations.

To create a factory default image, please follow the steps below.

Step 1: Turn on the system. When the following screen displays (**Figure B-7**), press the <F3> key to access the recovery tool. The message will display for 10 seconds, please press F3 before the system boots into the operating system.

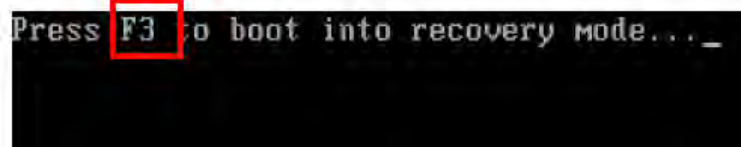


Figure B-7: Press F3 to Boot into Recovery Mode

Step 2: The recovery tool menu appears. Type <4> and press <Enter>. (**Figure B-8**)

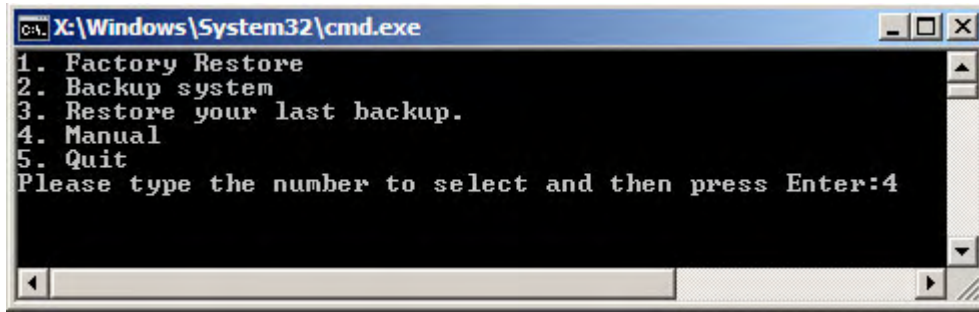


Figure B-8: Recovery Tool Menu

Step 3: The About Symantec Ghost window appears. Click **OK** button to continue.

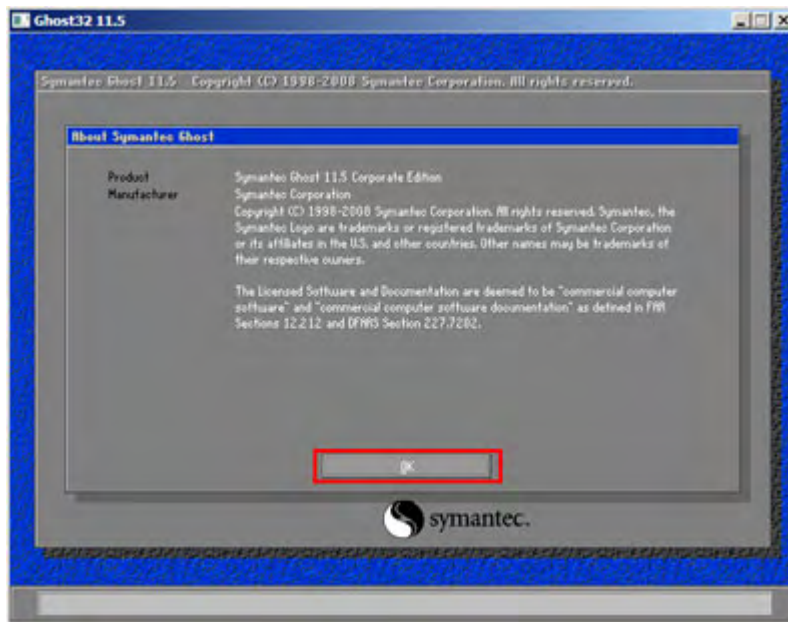


Figure B-9: About Symantec Ghost Window

Step 4: Use mouse to navigate to the option shown below (**Figure B-10**).

ICEROCK-08A Panel PC

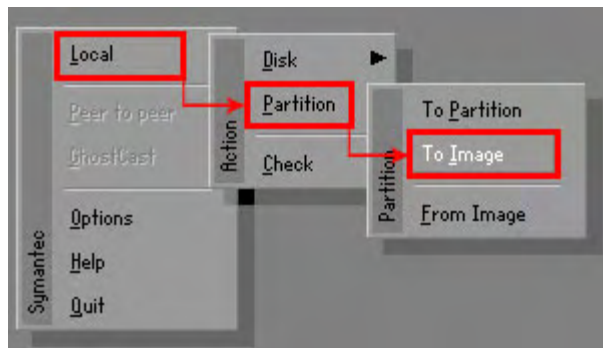


Figure B-10: Symantec Ghost Path

Step 5: Select the local source drive as shown in **Figure B-11**. Then click OK.

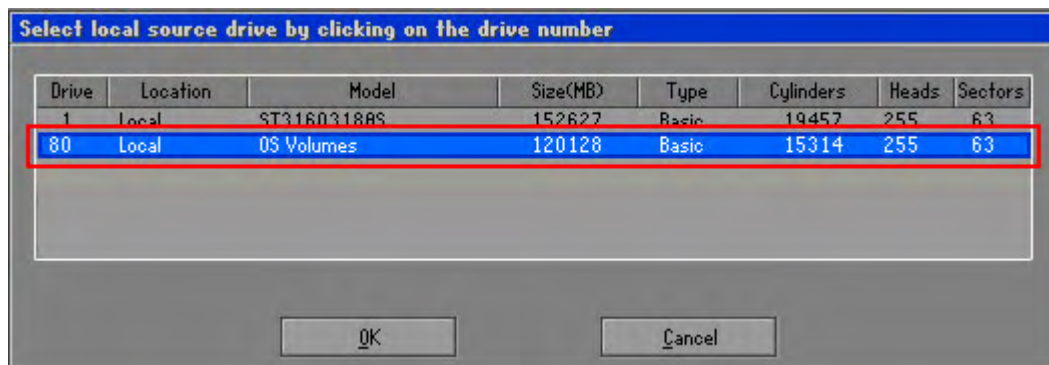


Figure B-11: Select a Local Source Drive

Step 6: Select a source partition from basic drive as shown in **Figure B-12**. Then click OK.

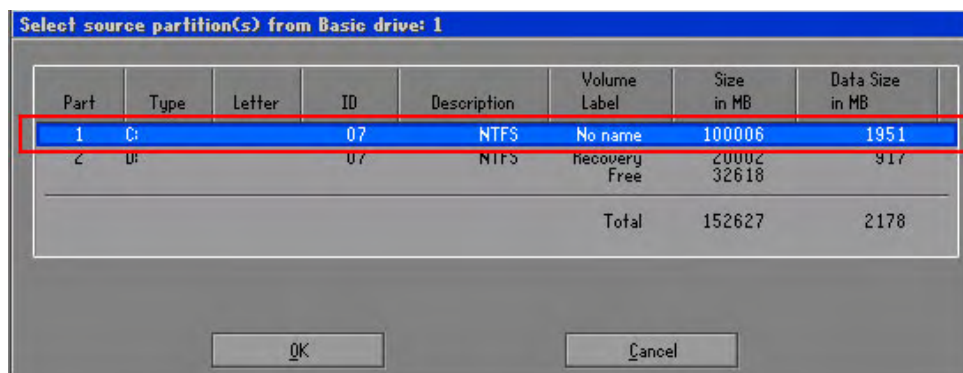


Figure B-12: Select a Source Partition from Basic Drive

Step 7: Select **1.2: [Recovery] NTFS drive** and enter a file name called **iei** (Figure B-13). Click **Save**. The factory default image will then be saved in the selected recovery drive and named IEI.GHO.

**WARNING:**

The file name of the factory default image must be **iei.GHO**.

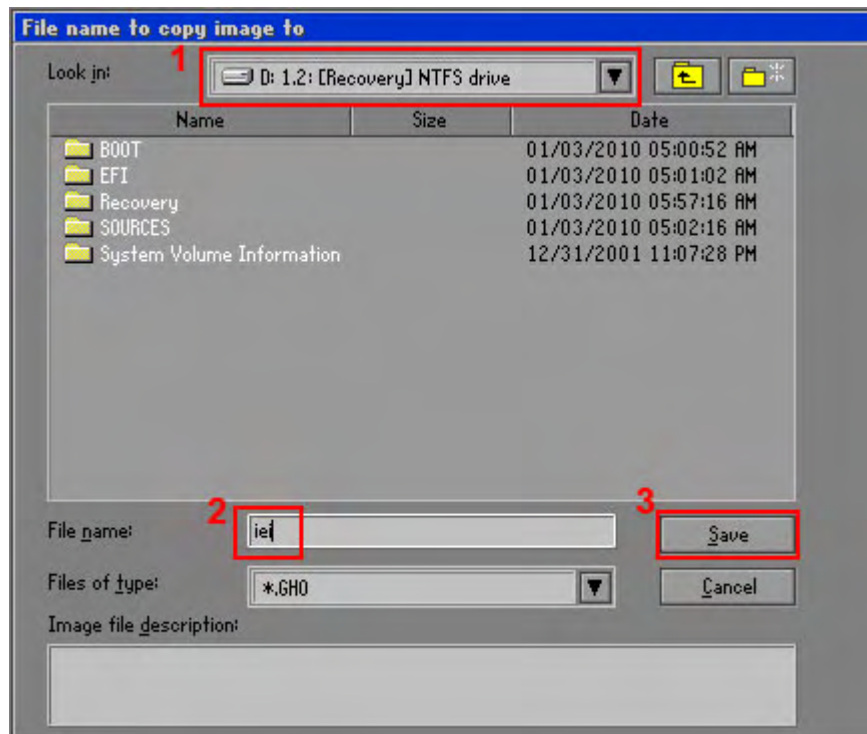


Figure B-13: File Name to Copy Image to

ICEROCK-08A Panel PC

Step 8: When the Compress Image screen in **Figure B-14** prompts, click **High** to make the image file smaller.

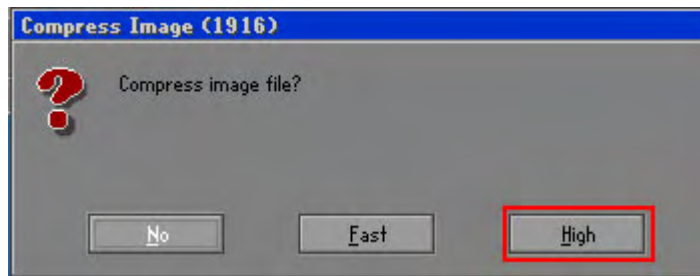


Figure B-14: Compress Image

Step 9: The Proceed with partition image creation window appears, click **Yes** to continue.

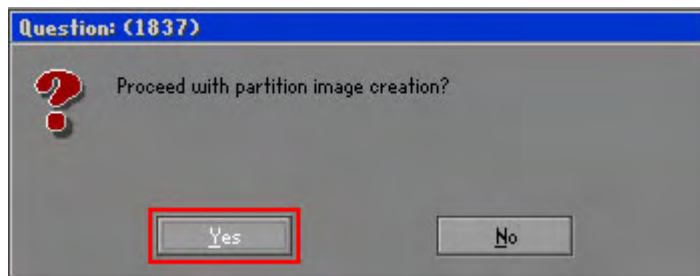


Figure B-15: Image Creation Confirmation

Step 10: The Symantec Ghost starts to create the factory default image (**Figure B-16**).

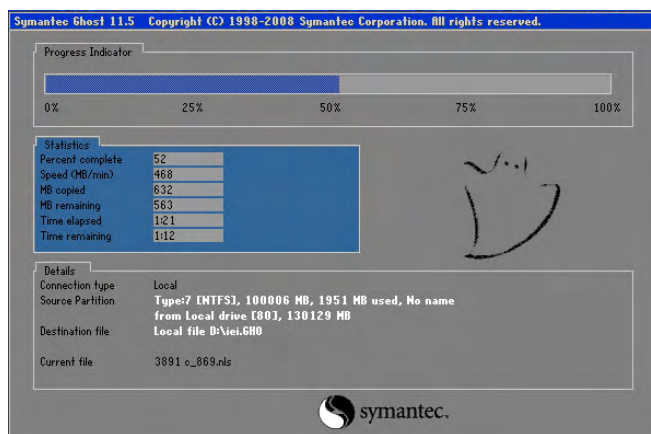


Figure B-16: Image Creation Complete

Step 11: When the image creation completes, a screen prompts as shown in **Figure B-17**.

Click **Continue** and close the Ghost window to exit the program.

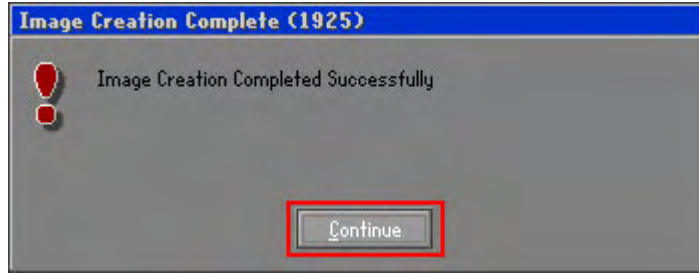


Figure B-17: Image Creation Complete

Step 12: The recovery tool main menu window is shown as below. Press any key to reboot the system.

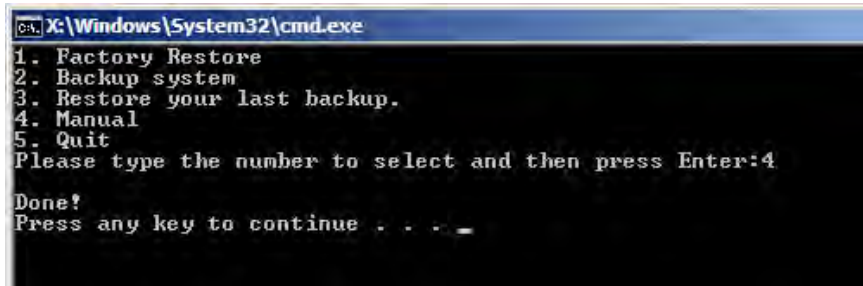


Figure B-18: Press Any Key to Continue

B.3 Setup Procedure for Linux

The initial setup procedures for Linux system are mostly the same with the procedure for Microsoft Windows. Please follow the steps below to setup recovery tool for Linux OS.

Step 1: Hardware and BIOS setup. Refer to **Section B.2.1**.

Step 2: Install Linux operating system. Make sure to install GRUB (v0.97 or earlier) MBR type and Ext3 partition type. Leave enough space on the hard drive to create the recover partition later.

ICEROCK-08A Panel PC

**NOTE:**

If the Linux OS is not installed with GRUB (v0.97 or earlier) and Ext3, the Symantec Ghost may not function properly.

While installing Linux OS, please create two partitions:

- Partition 1: /
- Partition 2: **SWAP**

**NOTE:**

Please reserve enough space for partition 3 for saving recovery images.

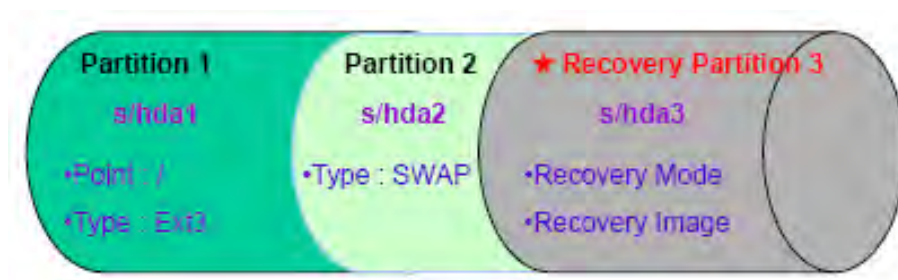


Figure B-19: Partitions for Linux

Step 3: Create a recovery partition. Insert the recovery CD into the optical disk drive.

Follow **Step 1 ~ Step 3** described in **Section B.2.2**. Then type the following commands (marked in red) to create a partition for recovery images.


```
system32>diskpart
DISKPART>list vol
DISKPART>sel disk 0
DISKPART>create part pri size= ____
DISKPART>assign letter=N
DISKPART>exit
```



```
system32>format N: /fs:ntfs /q /v:Recovery /y
```

```
system32>exit
```

Step 4: Build-up recovery partition. Press any key to boot from the recovery CD. It will take a while to launch the recovery tool. Please be patient. When the recovery tool setup menu appears, type <3> and press <Enter> (**Figure B-20**). The Symantec Ghost window appears and starts configuring the system to build-up a recovery partition. After completing the system configuration, press any key to reboot the system. Eject the recovery CD.

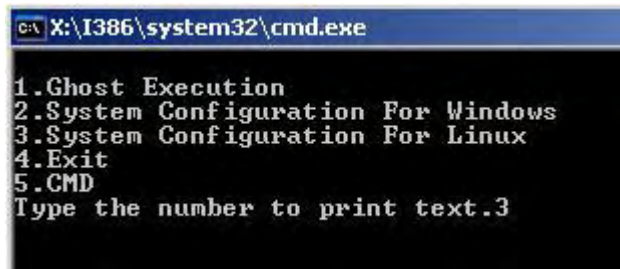


```
C:\X:\I386\system32\cmd.exe
1.Ghost Execution
2.System Configuration For Windows
3.System Configuration For Linux
4.Exit
5.CMD
Type the number to print text.3
```

Figure B-20: System Configuration for Linux

Step 5: Access the recovery tool main menu by modifying the “menu.lst”. To first access the recovery tool main menu, the menu.lst must be modified. In Linux system, enter Administrator (root). When prompt appears, type:

```
cd /boot/grub
```

```
vi menu.lst
```

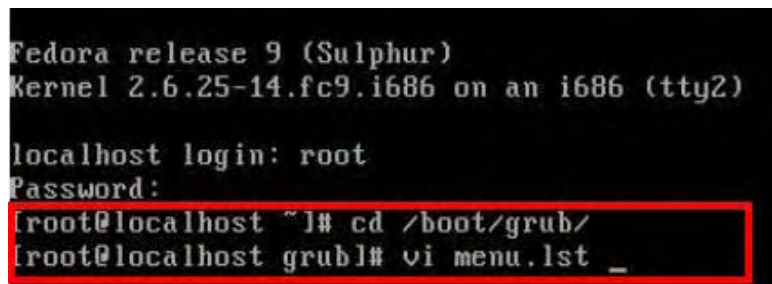

```
Fedora release 9 (Sulphur)
Kernel 2.6.25-14.fc9.i686 on an i686 (tty2)

localhost login: root
Password:
[root@localhost ~]# cd /boot/grub/
[root@localhost grub]# vi menu.lst _
```

Figure B-21: Access menu.lst in Linux (Text Mode)

Step 6: Modify the menu.lst as shown below.

ICEROCK-08A Panel PC

```
#boot=/dev/sda
default=0
timeout=10
splashimage=(hd0,0)/grub/splash.xpm.gz
hiddenmenu
title Fedora (2.6.25-14.fc9.i686)
    root (hd0,0)
    kernel /vmlinuz-2.6.25-14.fc9.i686 ro root=UUID=10f1acd
    ac38b5c78910 rhgb quiet
    initrd /initrd-2.6.25-14.fc9.i686.img

title Recovery Partition
    root (hd0,2)
    makeactive
    chainloader +1
```

- Type command:
title Recovery Partition
root (hd0,2)
makeactive
chainloader +1

Step 7: The recovery tool menu appears. (Figure B-22)

```
1. Factory Restore
2. Backup system
3. Restore your last backup.
4. Manual
5. Quit
Please type the number to select and then press Enter:
```

Figure B-22: Recovery Tool Menu

Step 8: Create a factory default image. Follow **Step 2 ~ Step 12** described in **Section B.2.5** to create a factory default image.

B.4 Recovery Tool Functions

After completing the initial setup procedures as described above, users can access the recovery tool by pressing **<F3>** while booting up the system. The main menu of the recovery tool is shown below.

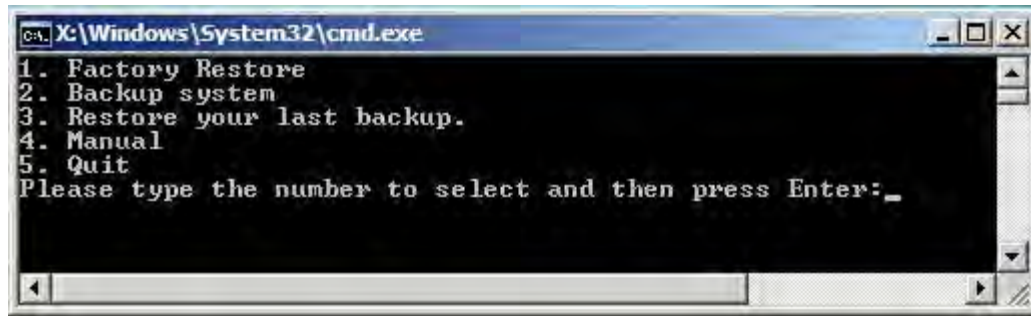


Figure B-23: Recovery Tool Main Menu

The recovery tool has several functions including:

1. **Factory Restore:** Restore the factory default image (iei.GHO) created in **Section B.2.5**.
2. **Backup system:** Create a system backup image (iei_user.GHO) which will be saved in the hidden partition.
3. **Restore your last backup:** Restore the last system backup image
4. **Manual:** Enter the Symantec Ghost window to configure manually.
5. **Quit:** Exit the recovery tool and restart the system.



WARNING:

Please do not turn off the system power during the process of system recovery or backup.



WARNING:

All data in the system will be deleted during the system recovery. Please backup the system files before restoring the system (either Factory Restore or Restore Backup).

ICEROCK-08A Panel PC

B.4.1 Factory Restore

To restore the factory default image, please follow the steps below.

Step 9: Type <1> and press <Enter> in the main menu.

Step 10: The Symantec Ghost window appears and starts to restore the factory default. A factory default image called **iei.GHO** is created in the hidden Recovery partition.

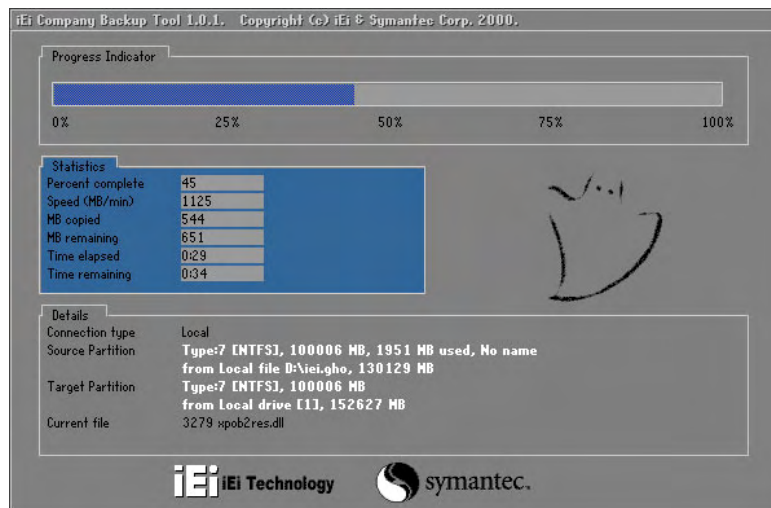


Figure B-24: Restore Factory Default

Step 11: The screen is shown as in **Figure B-25** when completed. Press any key to reboot the system.

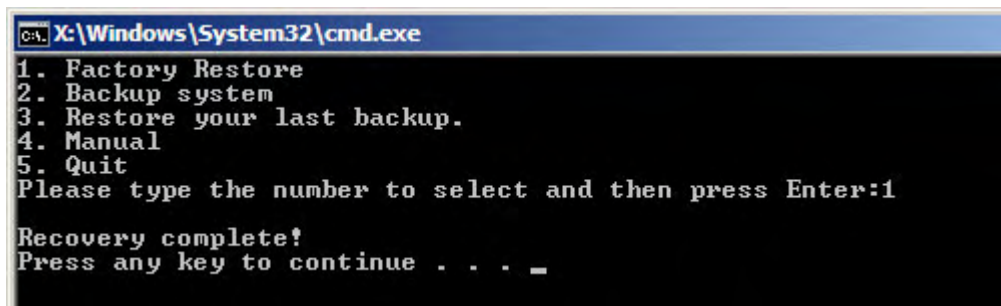


Figure B-25: Recovery Complete Window

B.4.2 Backup System

To backup the system, please follow the steps below.

Step 12: Type <2> and press <Enter> in the main menu.

Step 13: The Symantec Ghost window appears and starts to backup the system. A backup image called **iei_user.GHO** is created in the hidden Recovery partition.

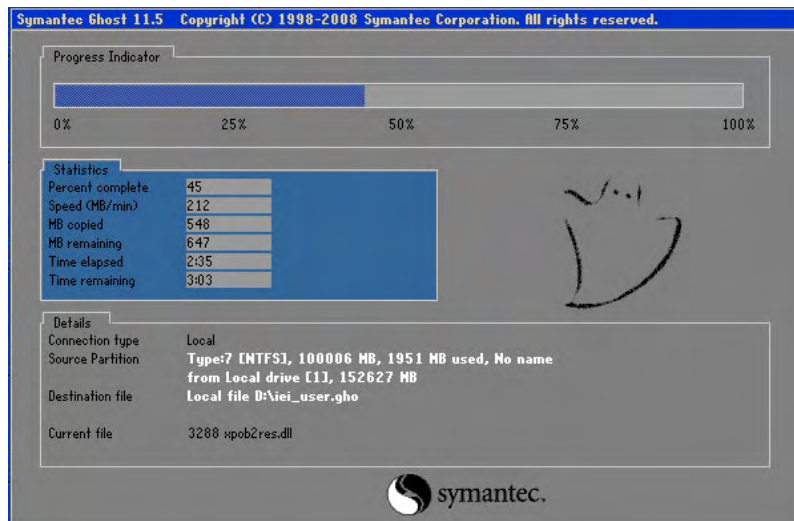


Figure B-26: Backup System

Step 14: The screen is shown as in **Figure B-27** when system backup is completed.

Press any key to reboot the system. 

Formatted: Bullet

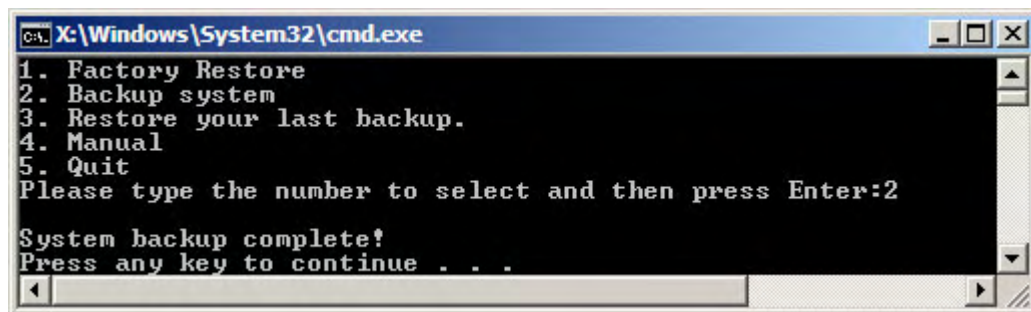


Figure B-27: System Backup Complete Window

ICEROCK-08A Panel PC

B.4.3 Restore Your Last Backup

To restore the last system backup, please follow the steps below.

Step 15: Type <3> and press <Enter> in the main menu.

Step 16: The Symantec Ghost window appears and starts to restore the last backup image (iei_user.GHO).

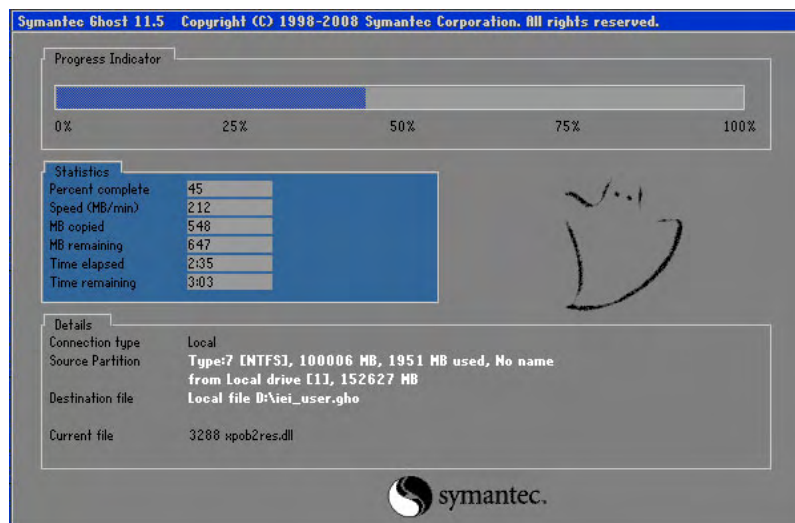


Figure B-28: Restore Backup

Step 17: The screen is shown as in **Figure B-29** when backup recovery is completed.

Press any key to reboot the system. 

Formatted: Bullet



Figure B-29: Restore System Backup Complete Window

B.4.4 Manual

To restore the last system backup, please follow the steps below.

Step 18: Type <4> and press <Enter> in the main menu.

Step 19: The Symantec Ghost window appears. Use the Ghost program to backup or recover the system manually.

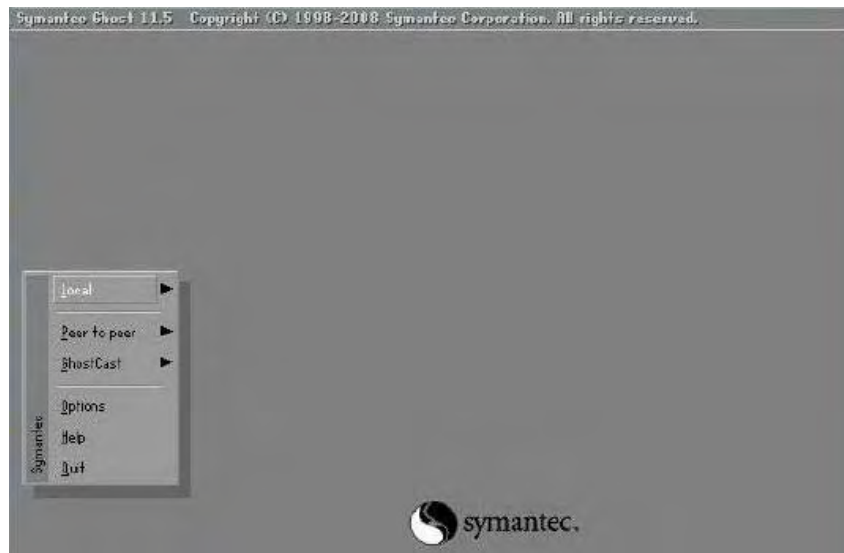


Figure B-30: Symantec Ghost Window

Step 20: When backup or recovery is completed, press any key to reboot the system.

B.5 Other Information

B.5.1 Using AHCI Mode or ALi M5283 / VIA VT6421A Controller


When the system uses AHCI mode or some specific SATA controllers such as ALi M5283 or VIA VT6421A, the SATA RAID/AHCI driver must be installed before using one key recovery. Please follow the steps below to install the SATA RAID/AHCI driver.

Step 1: Copy the SATA RAID/AHCI driver to a floppy disk and insert the floppy disk into a USB floppy disk drive. The SATA RAID/AHCI driver must be especially designed for the on-board SATA controller.


Step 2: Connect the USB floppy disk drive to the system.

Step 3: Insert the One Key Recovery CD into the system and boot the system from the CD.


Step 4: When launching the recovery tool, press <F6>.

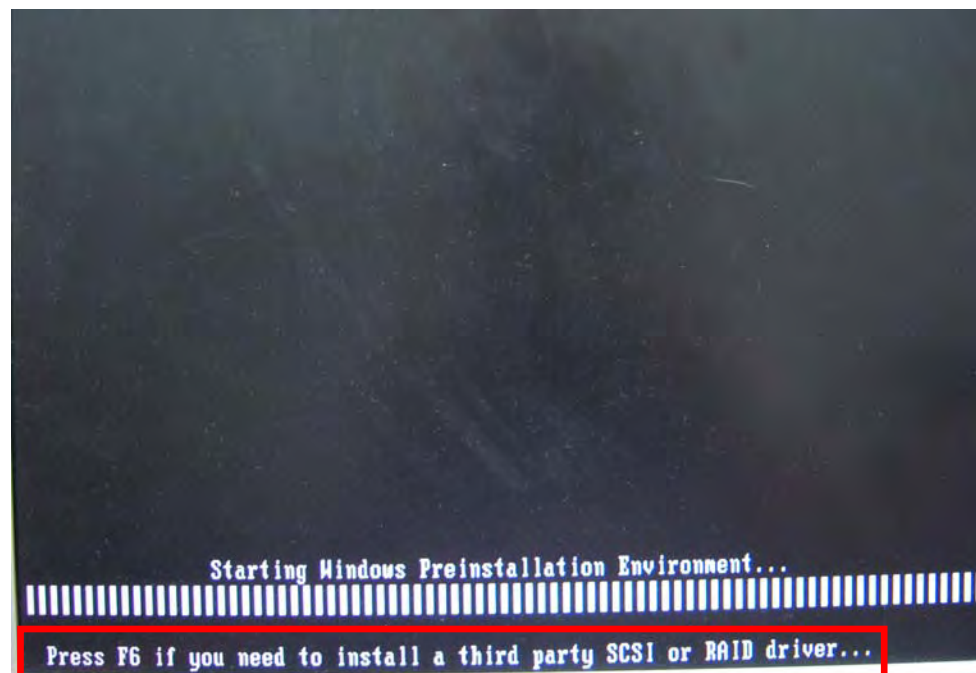

Step 5: When the following window appears, press <S> to select “Specify Additional Device”.

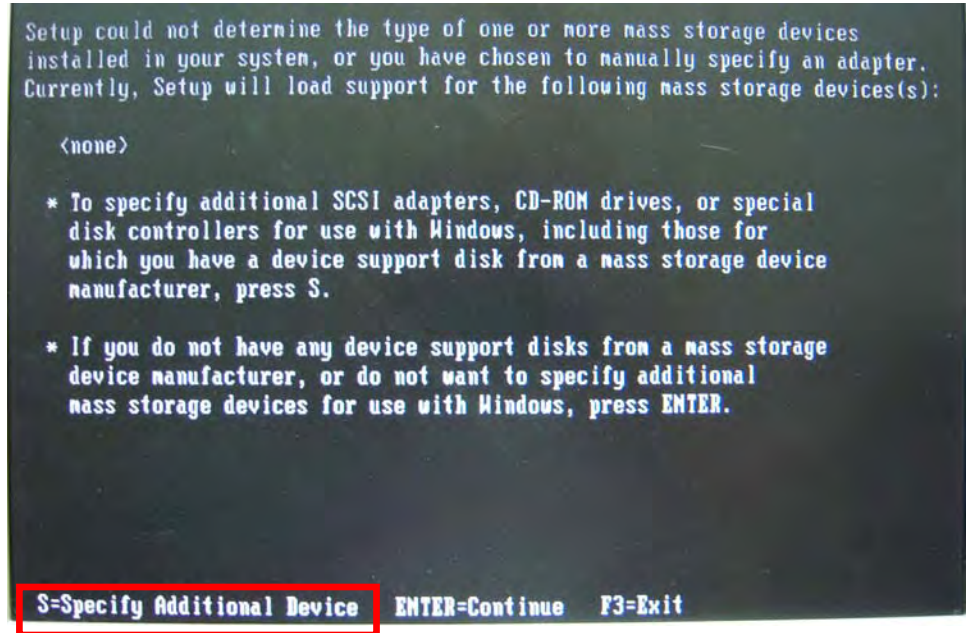

Step 6: In the following window, select a SATA controller mode used in the system. Then press <Enter>. The user can now start using the SATA HDD.

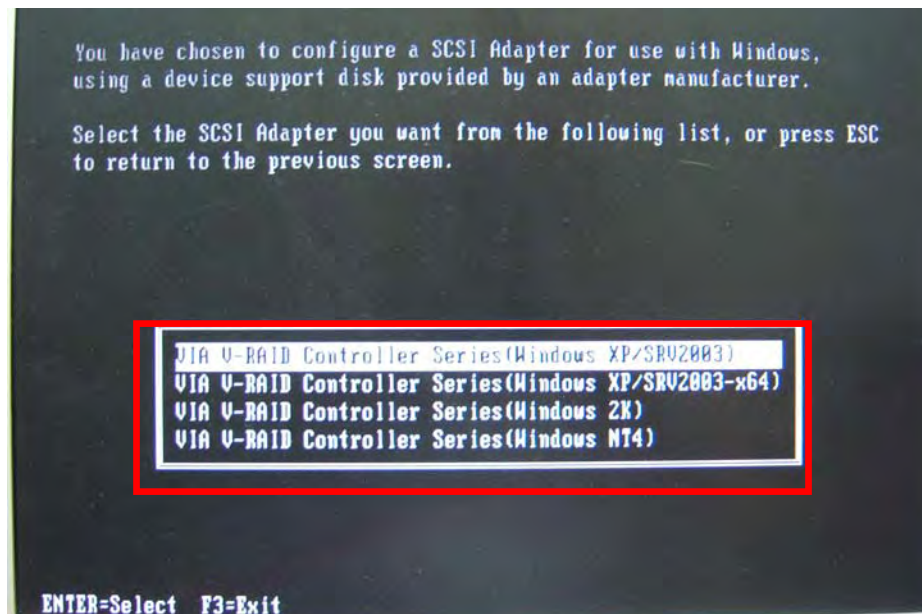

ICEROCK-08A Panel PC

Step 7: After pressing <Enter>, the system will get into the recovery tool setup menu. Continue to follow the setup procedure from **Step 4** in **Section 82** to finish the whole setup process.

B.5.2 System Memory Requirement

To be able to access the recovery tool by pressing <F3> while booting up the system, please make sure to have enough system memory. The minimum memory requirement is listed below.

- **Using Award BIOS:** 128 MB system memory
- **Using AMI BIOS:** 512 MB system memory.



Appendix

C

BIOS Options

ICEROCK-08A Panel PC

Below is a list of BIOS configuration options in the BIOS chapter.

System Overview	43
System Time [xx:xx:xx]	44
System Date [xx/xx/xx]	44
ATA/IDE Configuration [Compatible]	46
Legacy IDE Channels [SATA Pri, PATA Sec]	46
Configure SATA as [IDE]	47
Auto-Detected Drive Parameters	47
Type [Auto]	48
LBA/Large Mode [Auto]	49
Block (Multi Sector Transfer) [Auto]	49
PIO Mode [Auto]	49
DMA Mode [Auto]	50
S.M.A.R.T [Auto]	51
32Bit Data Transfer [Enabled]	51
Monitored Values	52
Restore on AC Power Loss [Last State]	53
G-Sensor Function [On/Off]	53
Charging Temperature Protect [50°C]	54
Discharging Temperature Protect [60°C]	54
USB Configuration	54
USB Devices Enabled	55
USB Function [Enabled]	55
USB 2.0 Controller [Enabled]	55
Legacy USB Support [Enabled]	55
USB2.0 Controller Mode [HiSpeed]	55
USB Mass Storage Reset Delay [20 Sec]	56
Device ##	57
Emulation Type [Auto]	57
IRQ# [Available]	58
DMA Channel# [Available]	59
Reserved Memory Size [Disabled]	59
Quick Boot [Enabled]	61
Quiet Boot [Enabled]	61

AddOn ROM Display Mode [Force BIOS]	61
Bootup Num-Lock [On]	61
Boot From LAN (RTL81111CP) [Disabled]	62
Change Supervisor Password	65
Change User Password	65
Internal Graphics Mode Select [Enable, 4 MB]	67
Boot Display Device [Auto]	67
LFP Panel Type	68
Spread Spectrum [Disabled]	69
Audio Controller [Auto]	69
USB Client Controller	70
Save Changes and Exit	70
Discard Changes and Exit	70
Discard Changes	71
Load Optimal Defaults	71
Load Failsafe Defaults	71

Appendix

D

Terminology

AC '97	Audio Codec 97 (AC'97) refers to a codec standard developed by Intel® in 1997.
ACPI	Advanced Configuration and Power Interface (ACPI) is an OS-directed configuration, power management, and thermal management interface.
AHCI	Advanced Host Controller Interface (AHCI) is a SATA Host controller register-level interface.
ATA	The Advanced Technology Attachment (ATA) interface connects storage devices including hard disks and CD-ROM drives to a computer.
ARMD	An ATAPI Removable Media Device (ARMD) is any ATAPI device that supports removable media, besides CD and DVD drives.
ASKIR	Amplitude Shift Keyed Infrared (ASKIR) is a form of modulation that represents a digital signal by varying the amplitude ("volume") of the signal. A low amplitude signal represents a binary 0, while a high amplitude signal represents a binary 1.
BIOS	The Basic Input/Output System (BIOS) is firmware that is first run when the computer is turned on and can be configured by the end user
CODEC	The Compressor-Decompressor (CODEC) encodes and decodes digital audio data on the system.
CompactFlash®	CompactFlash® is a solid-state storage device. CompactFlash® devices use flash memory in a standard size enclosure. Type II is thicker than Type I, but a Type II slot can support both types.
CMOS	Complimentary metal-oxide-conductor is an integrated circuit used in chips like static RAM and microprocessors.
COM	COM refers to serial ports. Serial ports offer serial communication to expansion devices. The serial port on a personal computer is usually a male DB-9 connector.
DAC	The Digital-to-Analog Converter (DAC) converts digital signals to analog signals.
DDR	Double Data Rate refers to a data bus transferring data on both the rising and falling edges of the clock signal.

ICEROCK-08A Panel PC

DMA	Direct Memory Access (DMA) enables some peripheral devices to bypass the system processor and communicate directly with the system memory.
DIMM	Dual Inline Memory Modules are a type of RAM that offer a 64-bit data bus and have separate electrical contacts on each side of the module.
DIO	The digital inputs and digital outputs are general control signals that control the on/off circuit of external devices or TTL devices. Data can be read or written to the selected address to enable the DIO functions.
EHCI	The Enhanced Host Controller Interface (EHCI) specification is a register-level interface description for USB 2.0 Host Controllers.
EIDE	Enhanced IDE (EIDE) is a newer IDE interface standard that has data transfer rates between 4.0 MBps and 16.6 MBps.
EIST	Enhanced Intel® SpeedStep Technology (EIST) allows users to modify the power consumption levels and processor performance through application software. The application software changes the bus-to-core frequency ratio and the processor core voltage.
FSB	The Front Side Bus (FSB) is the bi-directional communication channel between the processor and the Northbridge chipset.
GbE	Gigabit Ethernet (GbE) is an Ethernet version that transfers data at 1.0 Gbps and complies with the IEEE 802.3-2005 standard.
GPIO	General purpose input
HDD	Hard disk drive (HDD) is a type of magnetic, non-volatile computer storage device that stores digitally encoded data.
ICH	The Input/Output Control Hub (ICH) is an Intel® Southbridge chipset.
IrDA	Infrared Data Association (IrDA) specify infrared data transmission protocols used to enable electronic devices to wirelessly communicate with each other.
L1 Cache	The Level 1 Cache (L1 Cache) is a small memory cache built into the system processor.
L2 Cache	The Level 2 Cache (L2 Cache) is an external processor memory cache.

LCD	Liquid crystal display (LCD) is a flat, low-power display device that consists of two polarizing plates with a liquid crystal panel in between.
LVDS	Low-voltage differential signaling (LVDS) is a dual-wire, high-speed differential electrical signaling system commonly used to connect LCD displays to a computer.
POST	The Power-on Self Test (POST) is the pre-boot actions the system performs when the system is turned-on.
RAM	Random Access Memory (RAM) is volatile memory that loses data when power is lost. RAM has very fast data transfer rates compared to other storage like hard drives.
SATA	Serial ATA (SATA) is a serial communications bus designed for data transfers between storage devices and the computer chipsets. The SATA bus has transfer speeds up to 1.5 Gbps and the SATA II bus has data transfer speeds of up to 3.0 Gbps.
S.M.A.R.T	Self Monitoring Analysis and Reporting Technology (S.M.A.R.T) refers to automatic status checking technology implemented on hard disk drives.
UART	Universal Asynchronous Receiver-transmitter (UART) is responsible for asynchronous communications on the system and manages the system's serial communication (COM) ports.
UHCI	The Universal Host Controller Interface (UHCI) specification is a register-level interface description for USB 1.1 Host Controllers.
USB	The Universal Serial Bus (USB) is an external bus standard for interfacing devices. USB 1.1 supports 12Mbps data transfer rates and USB 2.0 supports 480Mbps data transfer rates.
VGA	The Video Graphics Array (VGA) is a graphics display system developed by IBM.

Appendix

E

Watchdog Timer


NOTE:

The following discussion applies to DOS environment. IEI support is contacted or the IEI website visited for specific drivers for more sophisticated operating systems, e.g., Windows and Linux.

The Watchdog Timer is provided to ensure that standalone systems can always recover from catastrophic conditions that cause the CPU to crash. This condition may have occurred by external EMIs or a software bug. When the CPU stops working correctly, Watchdog Timer either performs a hardware reset (cold boot) or a Non-Maskable Interrupt (NMI) to bring the system back to a known state.

A BIOS function call (INT 15H) is used to control the Watchdog Timer.

INT 15H:

AH – 6FH Sub-function:	
AL – 2:	Sets the Watchdog Timer's period.
BL:	Time-out value (Its unit-second is dependent on the item "Watchdog Timer unit select" in CMOS setup).

Table E-1: AH-6FH Sub-function

Call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer starts counting down. When the timer value reaches zero, the system resets. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the watchdog timer is disabled if the time-out value is set to zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.



NOTE:

When exiting a program it is necessary to disable the Watchdog Timer, otherwise the system resets.

Example program:

```
; INITIAL TIMER PERIOD COUNTER
```

```
;
```

```
W_LOOP:
```

```

MOV    AX, 6F02H    ;setting the time-out value
MOV    BL, 30      ;time-out value is 48 seconds
INT    15H

```

```
;
```

```
; ADD THE APPLICATION PROGRAM HERE
```

```
;
```

```

CMP    EXIT_AP, 1    ;is the application over?
JNE    W_LOOP       ;No, restart the application

```

```

MOV    AX, 6F02H    ;disable Watchdog Timer
MOV    BL, 0        ;
INT    15H

```

```
;
```

```
; EXIT ;
```

Appendix

F

Hazardous Materials Disclosure

F.1 Hazardous Materials Disclosure Table for IPB Products Certified as RoHS Compliant Under 2002/95/EC Without Mercury

The details provided in this appendix are to ensure that the product is compliant with the Peoples Republic of China (China) RoHS standards. The table below acknowledges the presences of small quantities of certain materials in the product, and is applicable to China RoHS only.

A label will be placed on each product to indicate the estimated “Environmentally Friendly Use Period” (EFUP). This is an estimate of the number of years that these substances would “not leak out or undergo abrupt change.” This product may contain replaceable sub-assemblies/components which have a shorter EFUP such as batteries and lamps. These components will be separately marked.

Please refer to the table on the next page.

Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Housing	X	O	O	O	O	X
Display	X	O	O	O	O	X
Printed Circuit Board	X	O	O	O	O	X
Metal Fasteners	X	O	O	O	O	O
Cable Assembly	X	O	O	O	O	X
Fan Assembly	X	O	O	O	O	X
Power Supply Assemblies	X	O	O	O	O	X
Battery	O	O	O	O	O	O

O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in SJ/T11363-2006

X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in SJ/T11363-2006

ICEROCK-08A Panel PC

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签，此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
壳体	X	O	O	O	O	X
显示	X	O	O	O	O	X
印刷电路板	X	O	O	O	O	X
金属螺帽	X	O	O	O	O	O
电缆组装	X	O	O	O	O	X
风扇组装	X	O	O	O	O	X
电力供应组装	X	O	O	O	O	X
电池	O	O	O	O	O	O

O: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。
X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。